SCIENTIFIC CALCULATOR OPERATION GUIDE

<V/R Series>

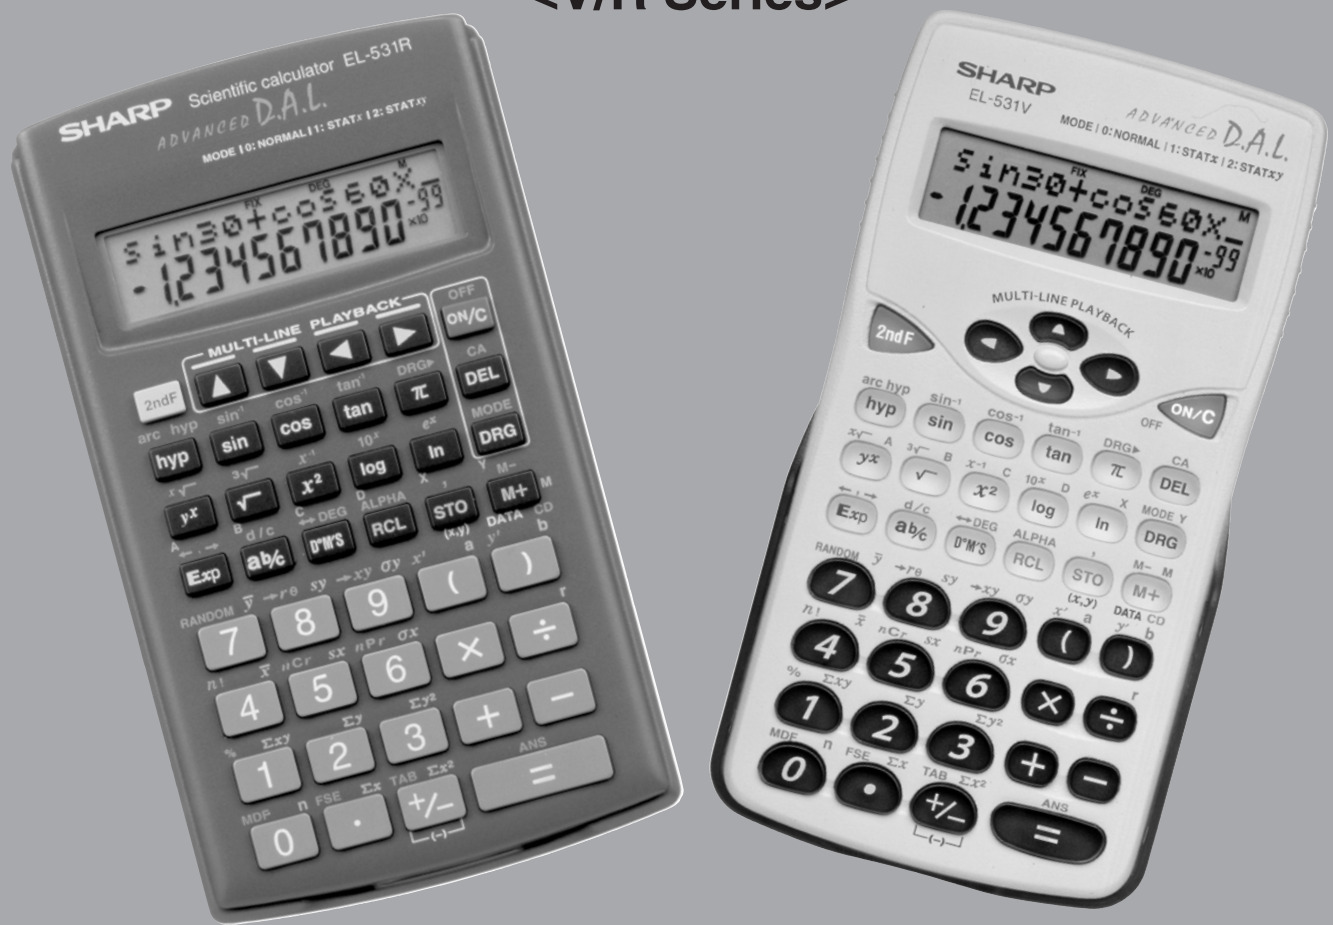

SHARP

How to Operate

≈Read Before Using≈

This operation guide has been written based on the EL-531V, EL-509V, EL-531VH, and EL-509VH models. Some functions described here are not featured on other models. In addition, key operations and symbols on the display may differ according to the model.

1. KEY LAYOUT

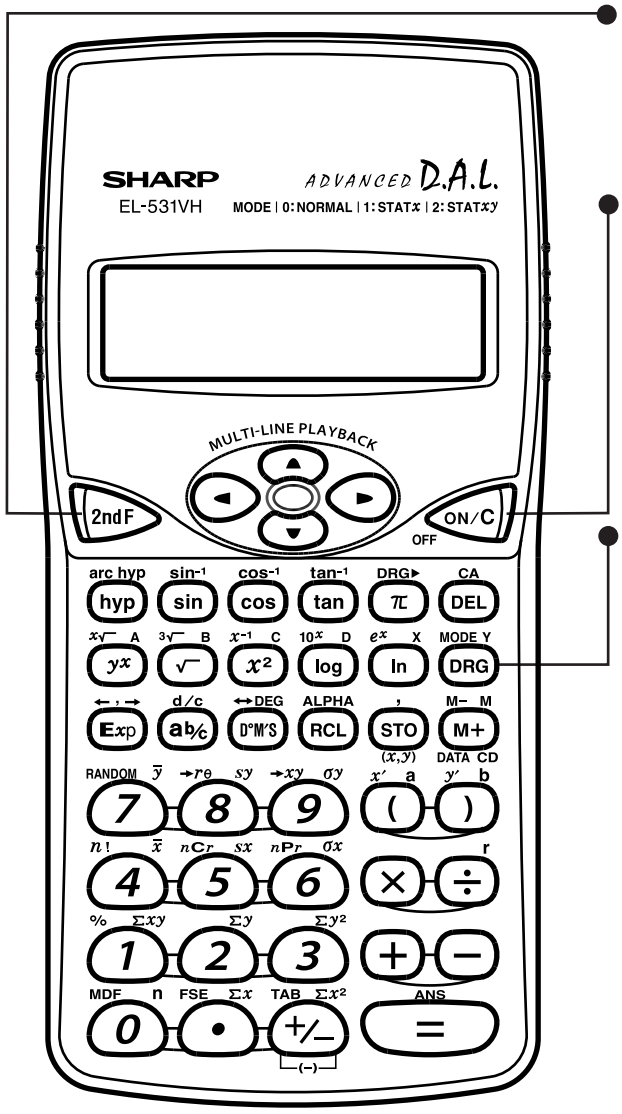

2nd function key

Pressing this key will enable the functions written in yellow above the calculator buttons.

ON/C, OFF key

Direct function

ON/C

<Power on>

2nd function

2ndF OFF

<Power off>

Written in yellow above the ON/C key

Mode key

This calculator can operate in three different modes as follows.

<Example>

[Normal mode]

2ndF MODE 0

•Mode = 0; normal mode for performing normal arithmetic and function calculations.

[STAT-1 mode]

2ndF MODE 1

•Mode = 1; STAT-1 mode for performing 1-variable statistical calculations.

[STAT-2 mode]

2ndF MODE 2

•Mode = 2; STAT-2 mode for performing 2-variable statistical calculations.

2. RESET SWITCH

RESET

If the calculator fails to operate normally, press the reset switch on the back to reinitialise the unit. The display format and calculation mode will return to their initial settings.

NOTE:
Pressing the reset switch will erase any data stored in memory.

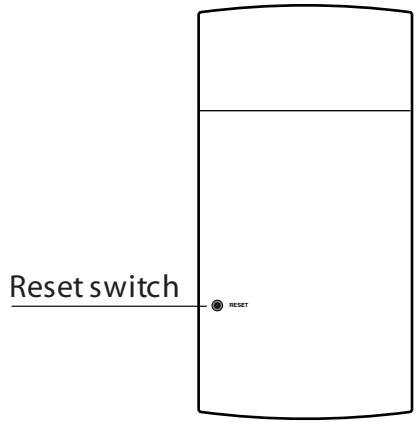

CONTENTS

HOW TO OPERATE

Read Before Using

Key layout/Reset switch 2

Display pattern 3

Display format FSE TAB 3

Exponent display Exp 4

Angular unit 5

Function and Key Operation

ON/OFF, entry correction keys ON/C OFF CA ▲ ▼ ◀ ▶ DEL 6

Data entry keys • +/− π Exp 7

Random key RANDOM 8

Modify key MDF 9

Basic arithmetic keys, parentheses + − × ÷ = ( ) 10

Percent % 11

Inverse, square, xth power of y, square root, cube root, xth root of y x^{-1} x^2 y^x $\sqrt{}$ $\sqrt[3]{}$ $\sqrt[x]{}$ 12

10 to the power of x, common logarithm log 10^x 13

e to the power of x, natural logarithm ln e^x 14

Factorials $n!$ 15

Permutations, combinations nPr nCr 16

Time calculation ↔DEG D°M'S 17

Fractional calculations $a\frac{b}{c}$ d/c 18

Memory calculations STO RCL M+ A ~ D X Y 19

Last answer memory ANS 20

Trigonometric functions sin cos tan 21

Arc trigonometric functions $\sin^{-1}$ $\cos^{-1}$ $\tan^{-1}$ 22

Hyperbolic functions hyp arc hyp 23

Coordinate conversion $\rightarrow r\theta$ $\rightarrow xy$, ←,→ 24

STATISTICS FUNCTION

Data input and erase 25

"ANS" keys for 1-variable statistics 26

"ANS" keys for 2-variable statistics 28

3. DISPLAY PATTERN

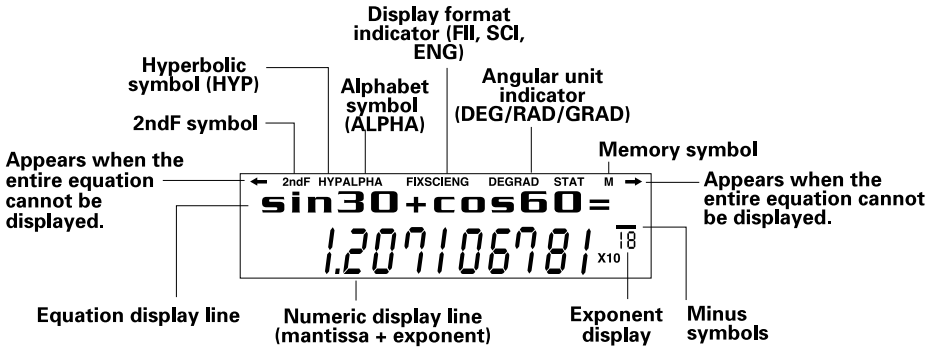

The actual display does not appear like this.
This illustration is for explanatory purposes only.

4. DISPLAY FORMAT AND DECIMAL SETTING FUNCTION

For convenient and easy operation, this model can be used in one of four display modes. The selected display status is shown in the upper part of the display (Format Indicator).
Note: If more 0's (zeros) than needed are displayed when the ON/C key is pressed, check whether or not the calculator is set to a Special Display Format.

- Floating decimal point format (no symbol is displayed)
  Valid values beyond the maximum range are displayed in the form of a [10-digit (mantissa) + 2-digit (exponent)]
- Fixed decimal point format (FIX is displayed)
  Displays the fractional part of the calculation result according to the specified number of decimal places.
- Scientific notation (SCI is displayed)
  Frequently used in science to handle extremely small or large numbers.
- Engineering scientific notation (ENG is displayed)
  Convenient for converting between different units.

<Example> Let's compare the display result of [10000 ÷ 8.1 =] in each display format.

Initial display

(specifies normal mode)

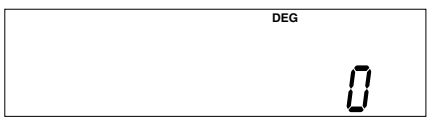

10000 [÷] 8.1 [=]

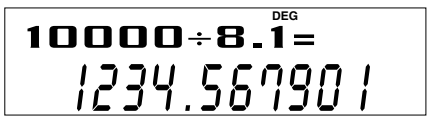

(normal mode)

[2ndF] [FSE] [2ndF] [TAB] [3]

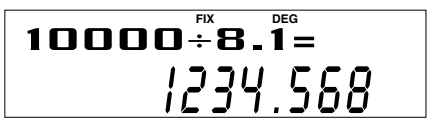

(FIX mode TAB = 3)

2nd F FSE



(SCI mode)

2nd F FSE



(ENG mode)

2nd F FSE



(normal mode)

5. EXPONENT DISPLAY

The distance from the earth to the sun is approx. 150,000,000 (1.5×10^8) km. Values such as this with many zeros are often used in scientific calculations, but entering the zeros one by one is a great deal of work and it's easy to make mistakes.
In such a case, the numerical values are divided into mantissa and exponent portions, displayed and calculated.

<Example> What is the number of electronics flowing in a conductor when the electrical charge across a given cross-section is 0.32 coulombs. (The charge on a single electron = 1.6×10^{-19} coulombs).

0.32 ÷

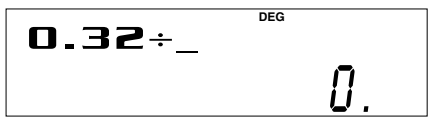

1.6 Exp 19

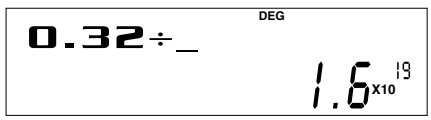

=

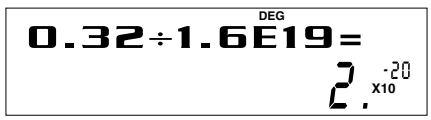

6. ANGULAR UNIT

Angular values are converted from DEG to RAD to GRAD with each push of the DRG key. This function is used when doing calculations related to trigonometric functions or coordinate geometry conversions.

Degrees (DEG is shown at the top of the display)

A commonly used unit of measure for angles. The angular measure of a circle is expressed as 360°.

Radians (RAD is shown at the top of the display)

Radians are different than degrees and express angles based on the circumference of a circle. 180° is equivalent to π radians. Therefore, the angular measure of a circle is 2π radians.

Grads (GRAD is shown at the top of the display)

Grads are a unit of angular measure used in Europe, particularly in France. An angle of 90 degrees is equivalent to 100 grads.

The relationships between the three types of angular units can be expressed as right:

90° (DEG) =
π/2 (RAD) =
100 (GRAD) =

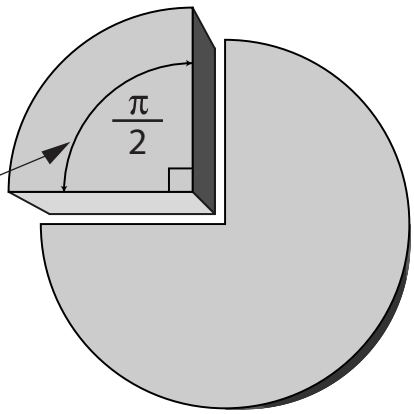

<Example> Check to confirm 90 degrees equaling π/2 radians equaling 100 grads. (π=3.14159...)

Angular indicator

Operation	Display
ON/C DRG ..... DRG (in DEG mode)	DEG 0.
90 2nd F DRG▶	RAD 90▶RAD 1.570796327 (π/2)
2nd F DRG▶	GRAD ANS▶GRAD 100.
2nd F DRG▶	DEG ANS▶DEG 90.

≈Function and Key Operation≈

ON/OFF, Entry Correction Keys

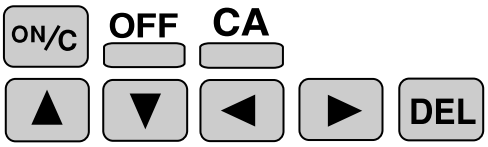

ON/C Turns the calculator on or clears the data. It also clears the contents of the calculator display and voids any calculator command; however, coefficients in 3-variable linear equations and statistics, as well as values stored in the independent memory in normal mode, are not erased.

OFF Turns the calculator off.

CA Clears all internal values, including coefficients in 3-variable linear equations and statistics. Values stored in memory in normal mode are not erased.

▲ ▼ These arrow keys are useful for Multi-Line playback, which lets you scroll through calculation steps one by one. (refer to page 8)

◄ ► **DEL** These keys are useful for editing equations. The ◄ key moves the cursor to the left, and the ► key moves the cursor to the right. The DEL key deletes the symbol/number at the cursor. (refer to page 8)

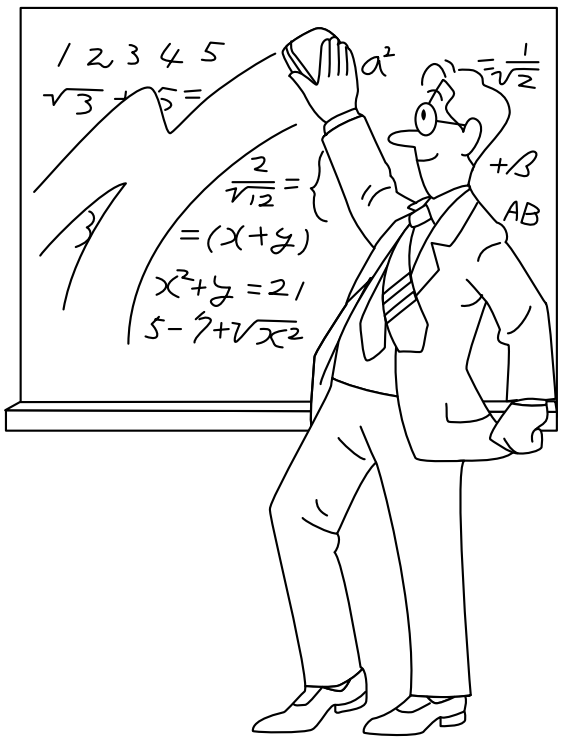

Data Entry Keys • +/– π Exp

0 to 9 Numeric keys for entering data values.

• Decimal point key. Enters a decimal point.

+/– Enters minus symbol or sign change key.
Changes positive numbers to negative and negative numbers to positive.

π Pressing π automatically enters the value for π (3.14159...).
The constant π, used frequently in function calculations, is the ratio of the circumference of a circle to its diameter.

Exp Pressing this key switches to scientific notation data entry.

<Example> Provided the earth is moving around the sun in a circular orbit, how many kilometers will it travel in a year?

* The average distance between the earth and the sun being 1.496×10^8 km.

Circumference equals diameter x π; therefore,
$1.496 \times 10^8 \times 2 \times \pi$

Operation	Display
1 • 496 Exp 8	
× 2 × π =	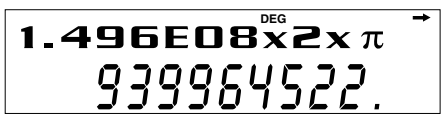

Random RANDOM

RANDOM Generates random numbers.
Random numbers are three-decimal-place values between 0.000 and 0.999. Using this function enables the user to obtain unbiased sampling data derived from random values generated by the calculator.

<Example>

2nd F RANDOM = 0.*** (a random number has been generated)

APPLICATIONS:
Building sample sets for statistics or research.

Modify MDF

MDF

Function to round calculation results.
Even after setting the number of decimal places on the display, the calculator performs calculations using a larger number of decimal places than that which appears on the display. By using this function, internal calculations will be performed using only the displayed value.

<Example> **FIX mode TAB = 1 (normal calculation)**

5 ÷ 9 = 0.6 (internally, 0.5555...)
× 9 = 5.0

Rounded calculation (MDF)

5 ÷ 9 = 0.6 (internally, 0.5555...)
2nd F MDF (internally, 0.6)
× 9 = 5.4

APPLICATIONS:
Frequently used in scientific and technical fields, as well as business, when performing chained calculations.

Basic Arithmetic Keys, Parentheses

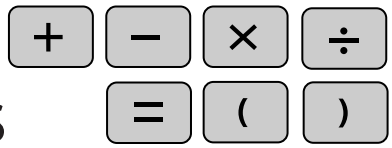

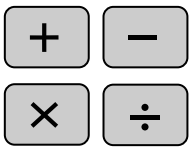

The four basic operators. Each is used in the same way as a standard calculator:
+ (addition), – (subtraction), x (multiplication), and ÷ (division).

Finds the result in the same way as a standard calculator.



Used to specify calculations in which certain operations have precedence. You can make addition and subtraction operations have precedence over multiplication and division by enclosing them in parentheses.

Percent %

% For calculating percentages. Four methods of calculating percentages are presented as follows.

1) $**1**25 increased by **1**0%...**1**37.5

125 + 10 2ndF %



2) $**1**25 reduced by 20%...**1**00

125 − 20 2ndF %

3) **1**5% of $**1**25...**1**8.75

125 × 15 2ndF %

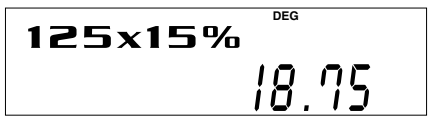

4) W hen $**1**25 equals 5% of X , X equals...2500

125 ÷ 5 2ndF %



Inverse, Square, xth Power of y, Square Root, Cube Root, xth Root of y

[x^{-1}] [x^2] [yx] [$\sqrt{\ }$] [$3\sqrt{\ }$] [$x\sqrt{\ }$]

[x^{-1}] Calculates the inverse of the value on the display.

[x^2] Squares the value on the display.

[yx] Calculates exponential values.

[$\sqrt{\ }$] Calculates the square root of the value on the display.
(The EL-506R/520R need to press 2ndF key first)

[$3\sqrt{\ }$] Calculates the cube root of the value on the display.

[$x\sqrt{\ }$] Calculates the x^{th} root of y.

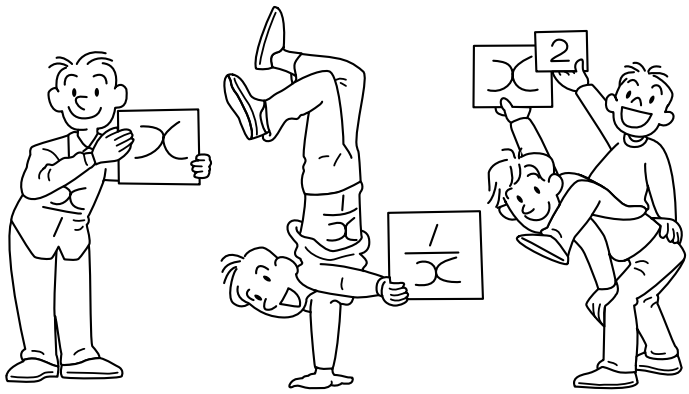

<Example>

Operation	Display
2 [×] 2 [×] 2 [×] 2 [=]	2x2x2x2= DEG 16.
2 [yx] 4 [=]	2^4= DEG 16.
4 [2ndF] [$x\sqrt{\ }$] 16 [=]	4x√16= DEG 2.

10 to the Power of x, Common Logarithm [log] [10^x]

[10^x] Calculates the value of 10 raised to the x^{th} power.

[log] Calculates logarithm, the exponent of the power to which 10 must be raised to equal the given value.

<Example>

Operation	Display
[2ndF] [10^x] 3 [=]	10^3= DEG 1000.
[log] 1000 [=]	log1000= DEG 3.

e to the Power of x, Natural Logarithm [ln] [e^x]

[e^x] Calculates powers based on the constant e (2.718281828).

[ln] Computes the value natural logarithm, the exponent of the power to which e must be raised to equal the given value.

<Example>

Operation	Display
[2nd F] [e^x] 5 [=]	DEG e^5= 148.413159 1
[ln] 10 [=]	DEG ln10= 2.302585093

Factorials $n!$

$n!$ The product of a given positive integer n multiplied by all the lesser positive integers from 1 to n-1 is indicated by n! and called the factorial of n.

<Example>

Operation	Display
7 [2nd F] [$n!$] [=]	7!= DEG 5040.

c.f
n! = 1 x 2 x 3 x ...xn

APPLICATIONS:
Used in statistics and mathematics. In statistics, this function is used in calculations involving combinations and permutations.

Permutations, Combinations nPr nCr

nPr

This function finds the number of different possible orderings in selecting r objects from a set of n objects. For example, there are six different ways of ordering the letters ABC in groups of three letters—ABC, ACB, BAC, BCA, CAB, and CBA.
The calculation equation is ${}_3P_3 = 3 \times 2 \times 1 = 6$ (ways).

nCr

This function finds the number of ways of selecting r objects from a set of n objects. For example, from the three letters ABC, there are three ways we can extract groups of two different letters—AB, AC, and CB.
The calculation equation is ${}_3C_2$.

<Example>

Operation	Display
6 2ndF nPr 4 =	6P4= 360. DEG
6 2ndF nCr 4 =	6C4= 15. DEG

APPLICATIONS:
Used in statistics (probability calculations) and in simulation hypotheses in fields such as medicine, pharmaceutics, and physics. Also, can be used to determine the chances of winning in lotteries.

Time Calculation ↔DEG D°M′S

↔DEG Converts a sexagesimal value displayed in degrees, minutes, seconds to decimal notation. Also, converts a decimal value to sexagesimal notataion (degrees, minutes, seconds).

D°M′S Inputs values in sexagesimal notation (degrees, minutes, seconds).

<Example> Convert 24° 28′ 35″ (24 degrees, 28 minutes, 35 seconds) to decimal notation. Then convert 24.476° to sexagesimal notation.

Operation	Display
24 D°M′S 28 D°M′S 35	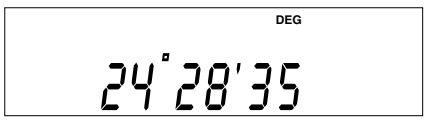
2nd F ↔DEG	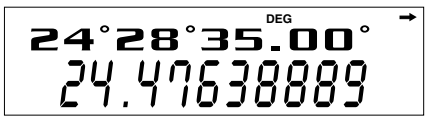
Convert to decimal notation	
2nd F ↔DEG	

Repeat last key operation to return to the previous display.

APPLICATIONS:
Used in calculations of angles and angular velocity in physics, and latitude and longitude in geography.

Fractional Calculations [a b/c] [d/c]

[a b/c] Inputs fractions and converts mutually between fractions and decimals.

[d/c] Converts between mixed numbers and improper fractions.

<Example> Add $3\frac{1}{2}$ and $\frac{5}{7}$, and convert to decimal notation.

Operation	Display
3 [a b/c] 1 [a b/c] 2 [+]	3r1r2+5r7= (DEG)
5 [a b/c] 7 [=]	4r3r14.
[a b/c]	3r1r2+5r7= (DEG)
	4.2142857 14

Convert to decimal notation
Press once to return to the previous display

Operation	Display
[2ndF] [d/c]	3r1r2+5r7= (DEG)
	59r14.

Convert to an improper fraction
Press once to return to the previous display

Operation	Display
[2ndF] [d/c]	3r1r2+5r7= (DEG)
	4r3r14.

APPLICATIONS:
There is a wide variety of applications for this function because fractions are such a basic part of mathematics. This function is useful for calculations involving electrical circuit resistance.

Memory Calculations

STO RCL M+ A ~ D X Y

STO — Stores displayed values in memories A~D, X, Y, M.

RCL — Recalls values stored in A~D, X, Y, M.

M+ — Adds the displayed value to the value in the independent memory M.

A ~ D X Y — Temporary memories

<Example>

Operation	Display
0 STO M (Enter 0 for M)	DEG 0⇒M 0.
25 × 27 M+	DEG M 25x27M+ 675.
7 × 3 M+	DEG M 7x3M+ 21.
RCL M	DEG M M= 696.

Last Answer Memory ANS

ANS Automatically recalls the last answer calculated by pressing =

<Example> Solve for x first and then solve for y using x.

$$x = \sqrt{2} + 3 \quad \text{and} \quad y = 4 \div x$$

Operation	Display
√ 2 + 3 =	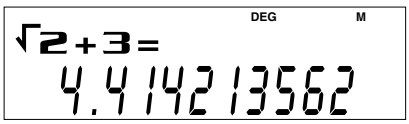
4 ÷ 2nd F ANS =	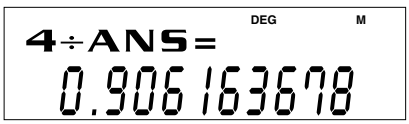

Trigonometric Functions [sin] [cos] [tan]

Trigonometric functions determine the ratio of three sides of a right triangle. Combination of three sides are sin, cos, and tan. Their relations are;

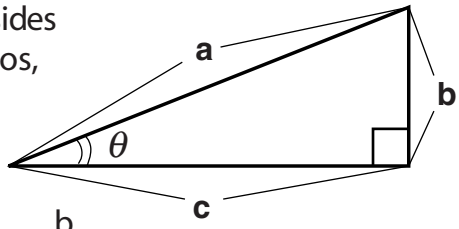

sin Calculates the sine of an angle. $\sin\theta = \frac{b}{a}$

cos Calculates the cosine of an angle. $\cos\theta = \frac{c}{a}$

tan Calculates the tangent of an angle. $\tan\theta = \frac{b}{c}$

<Example>

The angle from a point 15 meters from a building to the highest floor of the building is 45°. How tall is the building?

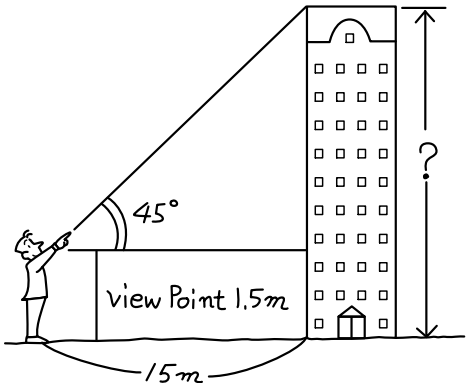

[DEG mode]

Operation	Display
[tan] 45 [×] 15 [+] 1 [•] 5 [=]	tan45x15+1.5 = 16.5 (DEG)

View point

APPLICATIONS:
Trigonometric functions are useful in mathematics and various engineering calculations. They are often used in astronomical observations, civil engineering and in calculations involving electrical circuits, as well as in calculations for physics such as parabolic motion and wave motion.

Arc Trigonometric Functions [sin⁻¹] [cos⁻¹] [tan⁻¹]

Arc trigonometric functions, the inverse of trigonometric functions, are used to determine an angle from ratios of a right triangle. The combinations of the three sides are $\sin^{-1}$, $\cos^{-1}$, and $\tan^{-1}$. Their relations are;

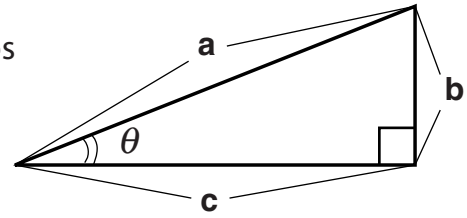

[sin⁻¹] (arc sine) Determines an angle based on the ratio b/a of two sides of a right triangle. $\theta = \sin^{-1}\frac{b}{a}$

[cos⁻¹] (arc cosine) Determines an angle based on the ratio c/a for two sides of a right triangle. $\theta = \cos^{-1}\frac{c}{a}$

[tan⁻¹] (arc tangent) Determines an angle based on the ratio a/b for two sides of a right triangle. $\theta = \tan^{-1}\frac{b}{c}$

<Example>

At what angle should an airplane climb in order to climb 80 meters in 100 meters?

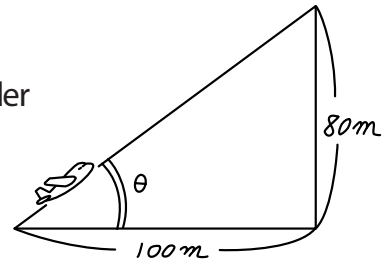

[DEG mode]

Operation

[2nd F] [tan⁻¹] [(] 80 [÷] 100 [)] [=]

Display

```
tan⁻¹(80÷100)          DEG
38.65980825
```

Hyperbolic Functions hyp arc hyp

For the EL-506R, select sinh, $\sin^{-1}$, cosh, $\cosh^{-1}$, tanh, $\tanh^{-1}$ from the MATH key

hyp The hyperbolic function is defined by using natural exponents in trigonometric functions.

arc hyp Arc hyperbolic functions are defined by using natural logarithms in trigonometric functions.

APPLICATIONS:
Hyperbolic and arc hyperbolic functions are very useful in electrical engineering and physics.

Coordinate Conversion →rθ →xy , ←,→

For the EL-506R, select→ r, θ and→ x, y from the MATH key

→rθ — Converts rectangular coordinates to polar coordinates (x,y →r, θ)

→xy — Converts polar coordinates to rectangular coordinates (r, θ → x, y)

, — Splits data used for dual-variable data input.

←,→ — Displays r, θ and x, y. (Cx ⇄ y or r ⇄ θ)

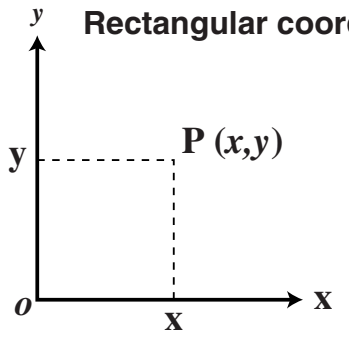

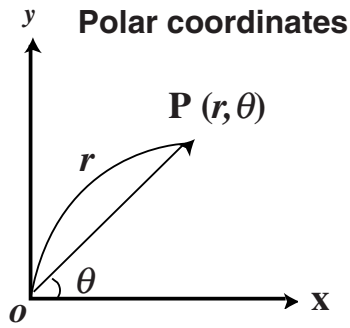

<Example> Determine the polar coordinates (r, θ) when the rectangular coordinates of Point P are (x = 7, y = 3).

[DEG mode]

Operation	Display
7 2ndF , 3 2ndF →rθ	r= 7.615773106 DEG
2ndF ←,→	θ= 23.19859051 DEG
7.6 2ndF , 23.2 2ndF →xy	x= 6.985428578 DEG
2ndF ←,→	y= 2.993958513 DEG

Operation example using the EL-531VH/ EL-509V

APPLICATIONS:
Coordinate conversion is often used in mathematics and engineering, especially for impedance calculations in electronics and electrical engineering.

Statistics Function

The statistics function is excellent for analyzing qualities of an event. Though primarily used for engineering and mathematics, the function is also applied to nearly all other fields including economics and medicine.

DATA INPUT AND ERASE

DATA Enters data for statistical calculations.

CD Clears last data input.

(x,y) Splits data used for dual-variable data input.
(Used for dual-variable statistical calculations.)

<Example 1> Here is a table of examination results. Input this data for analysis (along with data correction).

Data table 1

No.	1	2	3	4	5	6	7	8
Score	30	40	50	60	70	80	90	100
No. of pupils	2	4	5	7	12	10	8	2

[Select single-variable statistics mode]

Operation	Display
2ndF MODE 1 Select single-variable statistics mode	Stat x 0.
30 2ndF , 2 DATA	n= 2.
100 2ndF , 5 DATA In this case, the last data entry has been incorrectly input for the number of pupils.	n= 53.
2ndF CD	n= 48. (final data cleared)
100 , 2 DATA Score / Number of pupils	n= 50. (correct data input) Data total up to this point

"ANS" KEYS FOR 1-VARIABLE STATISTICS

$\bar{x}$ Calculates the average for input data (sample data x).

sx Calculates the standard deviation of samples from input data (sample data x).

σx Calculates the standard deviation for a population from input data (sample data x).

n Displays the number of input data (sample data x).

Σx Calculates the total for input data (sample data x).

Σx^2 Calculates the total to the second power for input data (sample data x).

NOTE:
1. Sample data refers to data selected randomly from the population.
2. Standard deviation of samples is determined by the sample data shift from an average value.
3. Standard deviation for the population is standard deviation when the sample data is deemed a population (full data).

<Let's check the results based on the previous data.>

RCL $\bar{x}$ 69 (average value)

RCL sx 17.75686128 (standard deviation)

RCL σx 17.57839583 (standard deviation of the population)

RCL n 50 (total count of data)

RCL Σx 3450 (total)

APPLICATIONS:
Single-variable statistical calculations are used in a broad range of fields, including engineering, business and economics. They are most often applied to analysis in atmospheric observations and physics experiments, as well as for quality control in factories.

<Example 2> The table below summarizes the dates in April when cherry blossoms bloom, and the average temperature for March in that same area. Determine basic statistical quantities for data X and data Y based on the data table.

<Data table 2>

	Year	1983	1984	1985	1986	1987	1988	1989	1990
x	Average temperature	6.2	7.0	6.8	8.7	7.9	6.5	6.1	8.2
y	Date blossoms bloom	13	9	11	5	7	12	15	7

2nd F MODE 2

Select dual-variable statistics mode

6 • 2 (x,y) 13 DATA

6 • 1 (x,y) 15 DATA

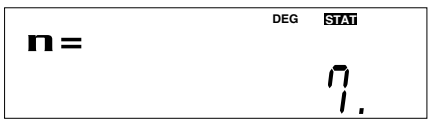

8 • 2 (x,y) 7 DATA

Temperature

Date

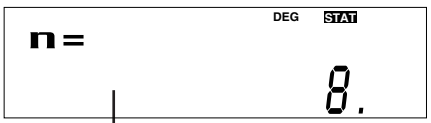

Data total up to this point

"ANS" KEYS FOR 2-VARIABLE STATISTICS

In addition to the 1-variable statistic keys, the following keys have been added for calculating 2-variable statistics.

Σxy Calculates the sum of the product for sample data X and sample data Y.

Σy Calculates the sum of the data (sample data Y).

Σy^2 Calculates the sum of the data (sample data Y) raised to the second power.

$\bar{y}$ Calculates the average value of the data (sample data Y).

σy Calculates the standard deviation of a data population (sample data Y).

sy Calculates the standard deviation for the data (sample data Y).

NOTE:
The codes for basic statistical quantities of sample data X and their meanings are the same as those for single-variable statistical calculations.

<Let's check the results based on the previous data.>

RCL	$\bar{x}$	7.175	(Average for data X)
RCL	sx	0.973579551	(Standard deviation for data X)
RCL	σx	0.91070028	(Standard deviation of the population for data X)
RCL	$\bar{y}$	9.875	(Average for data Y)
RCL	sy	3.440826313	(Standard deviation for data Y)
RCL	σy	3.218598297	(Standard deviation of the population for data Y)
RCL	n	8	(Total count of data)
RCL	Σx	57.4	(Sum of data X)
RCL	Σx^2	418.48	(Data X raised to the second power)
RCL	Σxy	544.1	(Sum of the product of data X and data Y)
RCL	Σy	79	(Sum of data Y)
RCL	Σy^2	863	(Data Y raised to the second power)

SHARP

SHARP CORPORATION OSAKA, JAPAN

©SHARP CORP. (MAR. '05)

SHARP®

ENGLISH

SCIENTIFIC CALCULATOR

EL-506W
MODEL **EL-546W**

OPERATION MANUAL

PRINTED IN CHINA / IMPRIMÉ EN CHINE / IMPRESO EN CHINA
04CGK (TINSE0719EHZZ)

INTRODUCTION

Thank you for purchasing the SHARP Scientific Calculator Model EL-506W/546W.
About the **calculation examples (including some formulas and tables)**, refer to the reverse side of this English manual. **Refer to the number on the right of each title in the manual for use**.
After reading this manual, store it in a convenient location for future reference.
Note: Some of the models described in this manual may not be available in some countries.

Operational Notes

- Do not carry the calculator around in your back pocket, as it may break when you sit down. The display is made of glass and is particularly fragile.
- Keep the calculator away from extreme heat such as on a car dashboard or near a heater, and avoid exposing it to excessively humid or dusty environments.
- Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
- Clean with a soft, dry cloth. Do not use solvents or a wet cloth.
- Do not drop it or apply excessive force.
- Never dispose of batteries in a fire.
- Keep batteries out of the reach of children.
- This product, including accessories, may change due to upgrading without prior notice.

NOTICE

- SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.
- SHARP will not be liable nor responsible for any incidental or consequential economic or property damage caused by misuse and/or malfunctions of this product and its peripherals, unless such liability is acknowledged by law.

♦ Press the RESET switch (on the back), with the tip of a ballpoint pen or similar object, only in the following cases. Do not use an object with a breakable or sharp tip. Note that pressing the RESET switch erases all data stored in memory.
- When using for the first time
- After replacing the batteries
- To clear all memory contents
- When an abnormal condition occurs and all keys are inoperative.

If service should be required on this calculator, use only a SHARP servicing dealer, SHARP approved service facility, or SHARP repair service where available.

Hard Case

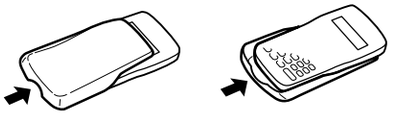

DISPLAY

- During actual use, not all symbols are displayed at the same time.
- Certain inactive symbols may appear visible when viewed from a far off angle.
- Only the symbols required for the usage under instruction are shown in the display and calculation examples of this manual.

←/→ : Appears when the entire equation cannot be displayed. Press [◄]/[►] to see the remaining (hidden) section.

xy*/*rθ : Indicates the mode of expression of results in the complex calculation mode.

▲/▼ : Indicates that data can be visible above/below the screen. Press [▲]/[▼] to scroll up/down the view.

2ndF : Appears when [2ndF] is pressed.

HYP : Indicates that [hyp] has been pressed and the hyperbolic functions are enabled. If [2ndF] [arc hyp] are pressed, the symbols "**2ndF HYP**" appear, indicating that inverse hyperbolic functions are enabled.

ALPHA : Appears when [ALPHA] (STAT VAR), [STO] or [RCL] is pressed.

FIX/SCI/ENG: Indicates the notation used to display a value.

DEG/RAD/GRAD: Indicates angular units.

MAT : Appears when matrix mode is selected.

LIST : Appears when list mode is selected.

STAT : Appears when statistics mode is selected.

M : Indicates that a value is stored in the independent memory.

? : Indicates that the calculator is waiting for a numerical value to be entered, such as during simulation calculation.

∠ : Appears when the calculator shows an angle as the result in the complex calculation mode.

i : Indicates an imaginary number is being displayed in the complex calculation mode.

BEFORE USING THE CALCULATOR

Key Notation Used in this Manual

In this manual, key operations are described as follows:

[e^x F / ln]
To specify e^x : [2ndF] [e^x]
To specify ln : [ln]
To specify F : [ALPHA] [F]

Functions that are printed in orange above the key require [2ndF] to be pressed first before the key. When you specify the memory, press [ALPHA] first. Numbers for input value are not shown as keys, but as ordinary numbers.

Power On and Off

Press [ON/C] to turn the calculator on, and [2ndF] [OFF] to turn it off.

Clearing the Entry and Memories

Operation	Entry (Display)	M F1-F4	A-F, X,Y ANS	STAT*1 STAT VAR*2	matA-D*3 L1-4*4
[ON/C]	○	×	×	×	×
[2ndF] [CA]	○	×	○	○	○
Mode selection	○	×	○	○	○
[2ndF] [M-CLR] [0] [0] *5	○	○	○	○	○
[2ndF] [M-CLR] [1] [0] *6	○	○	○	○	○
RESET switch	○	○	○	○	○

○ : Clear × : Retain
*1 Statistical data (entered data).
*2 $\bar{x}$, sx, σx, n, Σx, Σx^2, $\bar{y}$, sy, σy, Σy, Σy^2, Σxy, r, a, b, c.
*3 Matrix memories (matA, matB, matC and matD)
*4 List memories (L1, L2, L3 and L4)
*5 All variables are cleared.
*6 This key combination functions the same as the RESET switch.

[Memory clear key]
Press [2ndF] [M-CLR] to display the menu.

```
MEM RESET
0   1
```

- To clear all variables (M, A-F, X, Y, ANS, F1-F4, STAT VAR, matA-D, L1-4), press [0] [0] or [0] [ENT].
- To RESET the calculator, press [1] [0] or [1] [ENT]. The RESET operation will erase all data stored in memory, and restore the calculator's default setting.

Entering and Correcting the Equation

[Cursor keys]
- Press [◄] or [►] to move the cursor. You can also return to the equation after getting an answer by pressing [►] ([◄]). See the next section for using the [▲] and [▼] keys.
- See 'SET UP menu' for cursor use in the SET UP menu.

[Insert mode and Overwrite mode in the Equation display]
- Pressing [2ndF] [INS] switches between the two editing modes: insert mode (default); and overwrite mode. A triangular cursor indicates that an entry will be inserted at the cursor, while the rectangular cursor indicates to overwrite preexisting data as you make entries.
- To insert a number in the insert mode, move the cursor to the place immediately after where you wish to insert, then make a desired entry. In the overwrite mode, data under the cursor will be overwritten by the number you enter.
- The mode set will be retained until the next RESET operation.

[Deletion key]
- To delete a number/function, move the cursor to the number/function you wish to delete, then press [DEL]. If the cursor is located at the right end of an equation, the [DEL] key will function as a back space key.

Multi-line Playback Function 【1】

Previous equations may be recalled in the normal mode. Equations also include calculation ending instructions such as "=" and a maximum of 142 characters can be stored in memory. When the memory is full, stored equations are deleted in the order of the oldest first. Pressing [▲] will display the previous equation. Further pressing [▲] will display preceding equations (after returning to the previous equation, press [▼] to view equations in order). In addition, [2ndF] [▲] can be used to jump to the oldest equation.
- The multi-line memory is cleared by the following operations: [2ndF] [CA], mode change, RESET, N-base conversion and memory clear ([2ndF] [M-CLR]).

Priority Levels in Calculation

Operations are performed according to the following priority:
① Fractions (1┌4, etc.) ② ∠, engineering prefixes ③ Functions preceded by their argument (x^{-1}, x^2, n!, etc.) ④ Y^x, $\sqrt[x]{\ }$ ⑤ Implied multiplication of a memory value (2Y, etc.) ⑥ Functions followed by their argument (sin, cos, etc.) ⑦ Implied multiplication of a function (2sin30, etc.) ⑧ $_nC_r$, $_nP_r$ ⑨ ×, ÷ ⑩ +, − ⑪ AND ⑫ OR, XOR, XNOR ⑬ =, M+, M−, ⇒M, ▶DEG, ▶RAD, ▶GRAD, DATA, CD, →rθ, →xy and other calculation ending instructions
- If parentheses are used, parenthesized calculations have precedence over any other calculations.

INITIAL SET UP

Mode Selection

[MODE] [0] : Normal mode (NORMAL)
[MODE] [1] : Statistic mode (STAT)
[MODE] [2] : Equation mode (EQN)
[MODE] [3] : Complex number mode (CPLX)
[MODE] [4] : Matrix mode (MAT)
[MODE] [5] : List mode (LIST)

SET UP menu 【2】

Press [SET UP] to display the SET UP menu.

```
DRG FSE TAB
0   1
```

- A menu item can be selected by:
  - moving the flashing cursor by using [►] [◄], then pressing [ENT] ([=] key), or
  - pressing the number key corresponding to the menu item number.
- If ▲ or ▼ is displayed on the screen, press [▲] or [▼] to view the previous/next menu screen.
- Press [ON/C] to exit the SET UP menu.

[Determination of the Angular Unit]
The following three angular units (degrees, radians, and grads) can be specified.
- DEG (°) : Press [SET UP] [0] [0].
- RAD (rad) : Press [SET UP] [0] [1].
- GRAD (g) : Press [SET UP] [0] [2].

[Selecting the Display Notation and Decimal Places]
Four display notation systems are used to display calculation results: Floating point; Fixed decimal point; Scientific notation; and Engineering notation.
- When the FIX, SCI, or ENG symbol is displayed, the number of decimal places (TAB) can be set to any value between 0 and 9. Displayed values will be reduced to the corresponding number of digits.

[Setting the Floating Point Numbers System in Scientific Notation]
Two settings are used to display a floating point number: NORM1 (default setting) and NORM2. A number is automatically displayed in scientific notation outside a preset range:
- NORM1: $0.000000001 \le x \le 9999999999$
- NORM2: $0.01 \le x \le 9999999999$

SCIENTIFIC CALCULATIONS

- Press [MODE] [0] to select the normal mode.
- In each example, press [ON/C] to clear the display. If the FIX, SCI, or ENG indicator is displayed, clear the indicator by selecting 'NORM1' from the SET UP menu.

Arithmetic Operations 【3】

- The closing parenthesis [)] just before [=] or [M+] may be omitted.

Constant Calculations 【4】

- In constant calculations, the addend becomes a constant. Subtraction and division are performed in the same manner. For multiplication, the multiplicand becomes a constant.
- In the constants calculations, constants will be displayed as K.

Functions 【5】

- Refer to the calculation examples of each function.
- Before starting calculations, specify the angular unit.

Differential/Integral Functions 【6】

Differential and integral calculations are only available in the normal mode. For calculation conditions such as the x value in differential calculation or the initial point in integral calculation, only numerical values can be entered and equations such as 2^2 cannot be specified. It is possible to reuse the same equation over and over again and to recalculate by only changing the conditions without re-entering the equation.
- Performing a calculation will clear the value in the X memory.
- When performing a differential calculation, enter the formula first and then enter the x value in differential calculation and the minute interval (dx). If a numerical value is not specified for minute interval, $x \neq 0$ will be $|x| \times 10^{-5}$ and $x=0$ will be 10^{-5} from the value of the numeric derivative.
- When performing an integral calculation, enter the formula first and then enter a range of integral (a, b) and subintervals (n). If a numerical value is not specified for subintervals, calculation will be performed using n=100.

Since differential and integral calculations are performed based on the following equations, correct results may not be obtained, in certain rare cases, when performing special calculations that contain discontinuous points.

Integral calculation (Simpson's rule):

$$S=\frac{1}{3}h\{f(a)+4\{f(a+h)+f(a+3h)+\cdots\cdots+f(a+(N-1)h)\} +2\{f(a+2h)+f(a+4h)+\cdots\cdots+f(a+(N-2)h)\}+f(b)\}$$

$$\left(h=\frac{b-a}{N},\ N=2n,\ a\le x\le b\right)$$

Differential calculation:

$$f'(x)=\frac{f(x+\frac{dx}{2})-f(x-\frac{dx}{2})}{dx}$$

[When performing integral calculations]
Integral calculations, depending on the integrands and subintervals included, require longer calculation time. During calculation, "Calculating!" will be displayed. To cancel calculation, press [ON/C]. Note that there will be greater integral errors when there are large fluctuations in

the integral values during minute shifting of the integral range and for periodic functions, etc., where positive and negative integral values exist depending on the interval.

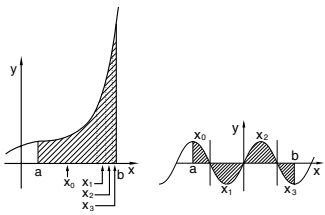

For the former case, divide integral intervals as small as possible. For the latter case, separate the positive and negative values. Following these tips will allow results of calculations with greater accuracy and will also shorten the calculation time.

Random Function

The Random function has four settings for use in the normal, statistics, matrix and list modes. (This function cannot be selected while using the N-Base function.) To generate further random numbers in succession, press [ENT]. Press [ON/C] to exit.

- The generated pseudo-random number series is stored in memory Y. Each random number is based on a number series.

[Random Numbers]

A pseudo-random number, with three significant digits from 0 up to 0.999, can be generated by pressing [2ndF] [RANDOM] [0] [ENT].

[Random Dice]

To simulate a die-rolling, a random integer between 1 and 6 can be generated by pressing [2ndF] [RANDOM] [1] [ENT].

[Random Coin]

To simulate a coin flip, 0 (head) or 1 (tail) can be randomly generated by pressing [2ndF] [RANDOM] [2] [ENT].

[Random Integer]

An integer between 0 and 99 can be generated randomly by pressing [2ndF] [RANDOM] [3] [ENT].

Angular Unit Conversions 【7】

Each time [2ndF] [DRG▸] are pressed, the angular unit changes in sequence.

Memory Calculations 【8】

Mode	ANS	M, F1-F4	A-F, X,Y
NORMAL	○	○	○
STAT	○	×	×
EQN	×	×	×
CPLX	○	○	×
MAT	○	×	○
LIST	○	×	○

○ : Available × : Unavailable

[Temporary memories (A-F, X and Y)]

Press [STO] and a variable key to store a value in memory.
Press [RCL] and a variable key to recall a value from the memory.
To place a variable in an equation, press [ALPHA] and a variable key.

[Independent memory (M)]

In addition to all the features of temporary memories, a value can be added to or subtracted from an existing memory value.
Press [ON/C] [STO] [M] to clear the independent memory (M).

[Last answer memory (ANS)]

The calculation result obtained by pressing [=] or any other calculation ending instruction is automatically stored in the last answer memory. A Matrix/List format result is not stored.

[Formula memories (F1-F4)]

Formulas up to 256 characters in total can be stored in F1 - F4. (Functions such as sin, etc., will be counted as one letter.) Storing a new equation in each memory will automatically replace the existing equation.

Note:

- Calculation results from the functions indicated below are automatically stored in memories X or Y replacing existing values.
  - Random function ..... Y memory
  - $\rightarrow r\theta$, $\rightarrow xy$ ..... X memory (r or x), Y memory (θ or y)
- Use of [RCL] or [ALPHA] will recall the value stored in memory using up to 14 digits.

Chain Calculations 【9】

- The previous calculation result can be used in the subsequent calculation. However, it cannot be recalled after entering multiple instructions or when the calculation result is in Matrix/List format.
- When using postfix functions ($\sqrt{\ }$, sin, etc.), a chain calculation is possible even if the previous calculation result is cleared by the use of the [ON/C] or [2ndF] [CA] keys.

Fraction Calculations 【10】

Arithmetic operations and memory calculations can be performed using fractions, and conversion between a decimal number and a fraction.

- If the number of digits to be displayed is greater than 10, the number is converted to and displayed as a decimal number.

Binary, Pental, Octal, Decimal, and Hexadecimal Operations (N-Base) 【11】

Conversions can be performed between N-base numbers. The four basic arithmetic operations, calculations with parentheses and memory calculations can also be performed, along with the logical operations AND, OR, NOT, NEG, XOR and XNOR on binary, pental, octal and hexadecimal numbers.

Conversion to each system is performed by the following keys:
[2ndF] [◂BIN] ("b" appears.), [2ndF] [◂PEN] ("P" appears.), [2ndF] [◂OCT] ("o" appears.), [2ndF] [◂HEX] ("H" appears.), [2ndF] [◂DEC] ("b", "P", "o" and "H" disappear.)

Note: The hexadecimal numbers A – F are entered by pressing [CNST], [y^x], [x^2], [x^3], [log], and [ln], and displayed as follows:

A → R, B → b, C → C, D → d, E → E, F → F

In the binary, pental, octal, and hexadecimal systems, fractional parts cannot be entered. When a decimal number having a fractional part is converted into a binary, pental, octal, or hexadecimal number, the fractional part will be truncated. Likewise, when the result of a binary, pental, octal, or hexadecimal calculation includes a fractional part, the fractional part will be truncated. In the binary, pental, octal, and hexadecimal systems, negative numbers are displayed as a complement.

Time, Decimal and Sexagesimal Calculations 【12】

Conversion between decimal and sexagesimal numbers can be performed, and, while using sexagesimal numbers, conversion to seconds and minutes notation. The four basic arithmetic operations and memory calculations can be performed using the sexagesimal system. Notation for sexagesimal is as follows:



Coordinate Conversions 【13】

- Before performing a calculation, select the angular unit.



Rectangular coord. Polar coord.

- The calculation result is automatically stored in memories X and Y.
  - Value of r or x: X memory
  - Value of θ or y: Y memory

Calculations Using Physical Constants 【14】

See the quick reference card and the English manual reverse side.
A constant is recalled by pressing [CNST] followed by the number of the physical constant designated by a 2-digit number.
The recalled constant appears in the display mode selected with the designated number of decimal places.
Physical constants can be recalled in the normal mode (when not set to binary, pental, octal, or hexadecimal), statistics mode, equation mode, matrix mode and list mode.

Note: Physical constants and metric conversions are based either on the 2002 CODATA recommended values or 1995 Edition of the "Guide for the Use of the International System of Units (SI)" released by NIST (National Institute of Standards and Technology) or on ISO specifications.

No.	Constant	No.	Constant
01	Speed of light in vacuum	28	Avogadro constant
02	Newtonian constant of gravitation	29	Molar volume of ideal gas (273.15 K, 101.325 kPa)
03	Standard acceleration of gravity		
04	Electron mass	30	Molar gas constant
05	Proton mass	31	Faraday constant
06	Neutron mass	32	Von Klitzing constant
07	Muon mass	33	Electron charge to mass quotient
08	Atomic mass unit-kilogram relationship	34	Quantum of circulation
		35	Proton gyromagnetic ratio
09	Elementary charge	36	Josephson constant
10	Planck constant	37	Electron volt
11	Boltzmann constant	38	Celsius Temperature
12	Magnetic constant	39	Astronomical unit
13	Electric constant	40	Parsec
14	Classical electron radius	41	Molar mass of carbon-12
15	Fine-structure constant	42	Planck constant over 2 pi
16	Bohr radius	43	Hartree energy
17	Rydberg constant	44	Conductance quantum
18	Magnetic flux quantum	45	Inverse fine-structure constant
19	Bohr magneton	46	Proton-electron mass ratio
20	Electron magnetic moment	47	Molar mass constant
21	Nuclear magneton	48	Neutron Compton wavelength
22	Proton magnetic moment	49	First radiation constant
23	Neutron magnetic moment	50	Second radiation constant
24	Muon magnetic moment	51	Characteristic impedance of vacuum
25	Compton wavelength		
26	Proton Compton wavelength	52	Standard atmosphere
27	Stefan-Boltzmann constant		

Metric Conversions 【15】

See the quick reference card and the English manual reverse side.
Unit conversions can be performed in the normal mode (when not set to binary, pental, octal, or hexadecimal), statistics mode, equation mode, matrix mode and list mode.

No.	Remarks	No.	Remarks
1	in : inch	23	fl oz(US) : fluid ounce(US)
2	cm : centimeter	24	mℓ : milliliter
3	ft : foot	25	fl oz(UK) : fluid ounce(UK)
4	m : meter	26	mℓ : milliliter
5	yd : yard	27	J : Joule
6	m : meter	28	cal : calorie
7	mile : mile	29	J : Joule
8	km : kilometer	30	cal_{15} : Calorie (15n°C)
9	n mile : nautical mile	31	J : Joule
10	m : meter	32	cal_{IT} : I.T. calorie
11	acre : acre	33	hp : horsepower
12	m^2 : square meter	34	W : watt
13	oz : ounce	35	ps : French horsepower
14	g : gram	36	W : watt
15	lb : pound	37	
16	kg : kilogram	38	Pa : Pascal
17	°F : Degree Fahrenheit	39	atm : atmosphere
18	°C : Degree Celsius	40	Pa : Pascal
19	gal (US) : gallon (US)	41	(1 mmHg = 1 Torr)
20	ℓ : liter	42	Pa : Pascal
21	gal (UK) : gallon (UK)	43	
22	ℓ : liter	44	J : Joule

Calculations Using Engineering Prefixes 【16】

Calculation can be executed in the normal mode (excluding N-base) using the following 9 types of prefixes.

Prefix		Operation	Unit
k	(kilo)	MATH 1 0	10^3
M	(Mega)	MATH 1 1	10^6
G	(Giga)	MATH 1 2	10^9
T	(Tera)	MATH 1 3	10^{12}
m	(milli)	MATH 1 4	10^{-3}
μ	(micro)	MATH 1 5	10^{-6}
n	(nano)	MATH 1 6	10^{-9}
p	(pico)	MATH 1 7	10^{-12}
f	(femto)	MATH 1 8	10^{-15}

Modify Function 【17】

Calculation results are internally obtained in scientific notation with up to 14 digits for the mantissa. However, since calculation results are displayed in the form designated by the display notation and the number of decimal places indicated, the internal calculation result may differ from that shown in the display. By using the modify function, the internal value is converted to match that of the display, so that the displayed value can be used without change in subsequent operations.

Solver Function 【18】

The x value can be found that reduces an entered equation to "0".

- This function uses Newton's method to obtain an approximation. Depending on the function (e.g. periodic) or start value, an error may occur (Error 2) due to there being no convergence to the solution for the equation.
- The value obtained by this function may include a margin of error. If it is larger than acceptable, recalculate the solution after changing 'Start' and dx values.
- Change the 'Start' value (e.g. to a negative value) or dx value (e.g. to a smaller value) if:
  - no solution can be found (Error 2).
  - more than two solutions appear to be possible (e.g. a cubic equation).
  - to improve the arithmetic precision.
- The calculation result is automatically stored in the X memory.

[Performing Solver function]

① Press MODE 0.
② Input a formula with an x variable.
③ Press MATH 0.
④ Input 'Start' value and press ENT. The default value is "0".
⑤ Input dx value (minute interval).
⑥ Press ENT.

SIMULATION CALCULATION (ALGB) 【19】

If you have to find a value consecutively using the same formula, such as plotting a curve line for $2x^2 + 1$, or finding the variable for $2x + 2y = 14$, once you enter the equation, all you have to do is to specify the value for the variable in the formula.
Usable variables: A-F, M, X and Y
Unusable functions: Random function

- Simulation calculations can only be executed in the normal mode.
- Calculation ending instructions other than = cannot be used.

Performing Calculations

① Press MODE 0.
② Input a formula with at least one variable.
③ Press 2ndF ALGB.
④ Variable input screen will appear. Input the value of the flashing variable, then press ENT to confirm. The calculation result will be displayed after entering the value for all used variables.
- Only numerical values are allowed as variables. Input of formulas is not permitted.
- Upon completing the calculation, press 2ndF ALGB to perform calculations using the same formula.
- Variables and numerical values stored in the memories will be displayed in the variable input screen. To change a numerical value, input the new value and press ENT.
- Performing simulation calculation will cause memory locations to be overwritten with new values.

STATISTICAL CALCULATIONS 【20】

Press MODE 1 to select the statistics mode. The seven statistical calculations listed below can be performed. After selecting the statistics mode, select the desired sub-mode by pressing the number key corresponding to your choice.
To change statistical sub-mode, reselect statistics mode (press MODE 1), then select the required sub-mode.

0 (SD) : Single-variable statistics
1 (LINE) : Linear regression calculation
2 (QUAD) : Quadratic regression calculation
3 (EXP) : Exponential regression calculation
4 (LOG) : Logarithmic regression calculation
5 (PWR) : Power regression calculation
6 (INV) : Inverse regression calculation

The following statistics can be obtained for each statistical calculation (refer to the table below):

Single-variable statistical calculation

Statistics of ① and value of the normal probability function

Linear regression calculation

Statistics of ① and ② and, in addition, estimate of y for a given x (estimate y') and estimate of x for a given y (estimate x')

Exponential regression, Logarithmic regression, Power regression, and Inverse regression calculation

Statistics of ① and ②. In addition, estimate of y for a given x and estimate of x for a given y. (Since the calculator converts each formula into a linear regression formula before actual calculation takes place, it obtains all statistics, except coefficients a and b, from converted data rather than entered data.)

Quadratic regression calculation

Statistics of ① and ② and coefficients a, b, c in the quadratic regression formula ($y = a + bx + cx^2$). (For quadratic regression calculations, no correlation coefficient (r) can be obtained.) When there are two x' values, press 2ndF ←·→.

When performing calculations using a, b and c, only one numeric value can be held.

①	$\bar{x}$	Mean of samples (x data)
	sx	Sample standard deviation (x data)
	σx	Population standard deviation (x data)
	n	Number of samples
	Σx	Sum of samples (x data)
	Σx^2	Sum of squares of samples (x data)
②	$\bar{y}$	Means of samples (y data)
	sy	Sample standard deviation (y data)
	σy	Population standard deviation (y data)
	Σy	Sum of samples (y data)
	Σy^2	Sum of squares of samples (y data)
	Σxy	Sum of products of samples (x, y)
	r	Correlation coefficient
	a	Coefficient of regression equation
	b	Coefficient of regression equation
	c	Coefficient of quadratic regression equation

- Use ALPHA and RCL to perform a STAT variable calculation.

Data Entry and Correction 【21】

Entered data are kept in memory until 2ndF CA or mode selection. Before entering new data, clear the memory contents.

[Data Entry]

Single-variable data
Data DATA
Data (x,y) *frequency* DATA (To enter multiples of the same data)

Two-variable data
Data x (x,y) *Data y* DATA
Data x (x,y) *Data y* (x,y) *frequency* DATA (To enter multiples of the same data x and y.)

- Up to 100 data items can be entered. With the single-variable data, a data item without frequency assignment is counted as one data item, while an item assigned with frequency is stored as a set of two data items. With the two-variable data, a set of data items without frequency assignment is counted as two data items, while a set of items assigned with frequency is stored as a set of three data items.

[Data Correction]

Correction prior to pressing DATA immediately after a data entry:
Delete incorrect data with ON/C, then enter the correct data.

Correction after pressing DATA:
Use ▲ ▼ to display the data previously entered.
Press ▼ to display data items in ascending (oldest first) order. To reverse the display order to descending (latest first), press the ▲ key.
Each item is displayed with 'Xn=', 'Yn=', or 'Nn=' (n is the sequential number of the data set).
Display the data item to modify, input the correct value, then press DATA. Using (x,y), you can correct the values of the data set all at once.

- To delete a data set, display an item of the data set to delete, then press 2ndF CD. The data set will be deleted.
- To add a new data set, press ON/C and input the values, then press DATA.

Statistical Calculation Formulas 【22】

Type	Regression formula
Linear	$y = a + bx$
Exponential	$y = a \bullet e^{bx}$
Logarithmic	$y = a + b \bullet \ln x$
Power	$y = a \bullet x^b$
Inverse	$y = a + b\frac{1}{x}$
Quadratic	$y = a + bx + cx^2$

In the statistical calculation formulas, an error will occur when:

- The absolute value of the intermediate result or calculation result is equal to or greater than 1×10^{100}.
- The denominator is zero.
- An attempt is made to take the square root of a negative number.
- No solution exists in the quadratic regression calculation.

Normal Probability Calculations 【20】【23】

- P(t), Q(t), and R(t) will always take positive values, even when t<0, because these functions follow the same principle used when solving for an area.
  Values for P(t), Q(t), and R(t) are given to six decimal places.

SIMULTANEOUS LINEAR EQUATIONS 【24】【25】

Simultaneous linear equation with two unknowns (2-VLE) or with three unknowns (3-VLE) may be solved using this function.

① 2-VLE: MODE 2 0
② 3-VLE: MODE 2 1

- If the determinant D = 0, an error occurs.
- If the absolute value of an intermediate result or calculation result is 1×10^{100} or more, an error occurs.
- Coefficients (a_1, etc.) can be entered using ordinary arithmetic operations.
- To clear the entered coefficients, press 2ndF CA.
- Pressing ENT when the determinant D is in the display recalls the coefficients. Each time ENT is pressed, a coefficient is displayed in the order of input, allowing the entered coefficients to be verified (by pressing 2ndF ENT, coefficients are displayed in reverse order.) To correct a particular coefficient being displayed, enter the correct value and then press ENT.

QUADRATIC AND CUBIC EQUATION SOLVERS 【26】

Quadratic ($ax^2 + bx + c = 0$) or cubic ($ax^3 + bx^2 + cx + d = 0$) equation may be solved using this function.

① Quadratic equation solver: MODE 2 2
② Cubic equation solver: MODE 2 3

- Press ENT after entering each coefficient.
- The result will be displayed by pressing ENT after entering all coefficients. When there are more than 2 results, the next solution will be displayed.
- When the result is an imaginary number, "xy" symbol will appear. The display can be switched between imaginary and real parts by pressing 2ndF ←·→.

COMPLEX NUMBER CALCULATIONS 【27】

To carry out addition, subtraction, multiplication, and division using complex numbers, press MODE 3 to select the complex number mode.
Results of complex number calculations are expressed in two modes:
① 2ndF →xy: Rectangular coordinate mode (xy appears.)
② 2ndF →$r\theta$: Polar coordinate mode ($r\theta$ appears.)

Complex number entry

① Rectangular coordinates
x-coordinate + *y-coordinate* i
or *x-coordinate* + *i y-coordinate*
② Polar coordinates
r ∠ *θ*
r: absolute value θ: argument

- On selecting another mode, the imaginary part of any complex number stored in the independent memory (M) will be cleared.
- A complex number expressed in rectangular coordinates with the y-value equal to zero, or expressed in polar coordinates with the angle equal to zero, is treated as a real number.
- Press MATH 0 to return the complex conjugate of the specified complex number.

MATRIX CALCULATIONS 【28】

This function enables the saving of up to 4 matrices (4 rows x 4 columns) for calculations. Press MODE 4 to enter the matrix mode.

- Matrix data must be entered prior to making calculations. Pressing ▲/▼ will display the matrix edit buffer along with ◢/◥. Enter the value of each item ('ROW', 'COLUMN', and then each element, e.g. 'MAT1,1') and press DATA after each. After entering all items, press ON/C, then press MATH 2 and specify matA-D to save the data.
- To edit data saved in matA-D, press MATH 1 and specify matA-D to recall the data to the matrix edit buffer. After editing, press ON/C, then press MATH 2 and specify matA-D to save the data.
- Before performing calculations, press ON/C to close the matrix edit buffer.
- When results of calculations are in the matrix format, the matrix edit buffer with those results will be displayed. (At this time, you cannot return to the equation.) To save the result in matA-D, press ON/C, then press MATH 2 and specify matA-D.
- Since there is only one matrix edit buffer, the previous data will be overwritten by the new calculation.
- In addition to the 4 arithmetic functions (excluding divisions between matrices), x^3, x^2, and x^{-1}, the following commands are available:

dim(*matrix name, row,column*)	Returns a matrix with dimensions changed as specified.
fill(*value,row,column*)	Fills each element with a specified value.
cumul *matrix name*	Returns the cumulative matrix.
aug(*matrix name, matrix name*)	Appends the second matrix to the first matrix as new columns. The first and second matrices must have the same number of rows.
identity *value*	Returns the identity matrix with specified value of rows and columns.
rnd_mat(*row,column*)	Returns a random matrix with specified values of rows and columns.
det *matrix name*	Returns the determinant of a square matrix.
trans *matrix name*	Returns the matrix with the columns transposed to rows and the rows transposed to columns.
mat→list (MATH 5)	Creates lists with elements from the left column of each matrix. (matA→L1, matB→L2, matC→L3, matD→L4) Mode changes from matrix mode to list mode.
matA→list (MATH 6)	Creates lists with elements from each column of the matrix. (matA→L1, L2, L3, L4) Mode changes from matrix mode to list mode.

LIST CALCULATIONS 【29】

This function enables the saving of up to 4 lists of 16 elements for calculations. Press MODE 5 to enter the list mode.

- List data must be entered prior to making calculations. Pressing ▲/▼ will display the list edit buffer along with ◢/◥. Enter the value of each item ('SIZE', and then each element, e.g.

'LIST1') and press [DATA] after each. After entering all items, press [ON/C], then press [MATH] [2] and specify L1-4 to save the data.
- To edit data saved in L1-4, press [MATH] [1] and specify L1-4 to recall the data to the list edit buffer. After editing, press [ON/C], then press [MATH] [2] and specify L1-4 to save the data.
- Before performing calculations, press [ON/C] to close the list edit buffer.
- When results of calculations are in the list format, the list edit buffer with those results will be displayed. (At this time, you cannot return to the equation.) To save the result in L1-4, press [ON/C], then press [MATH] [2] and specify L1-4.
- Since there is only one list edit buffer, the previous data will be overwritten by the new calculation.
- In addition to the 4 arithmetic functions, x^3, x^2, and x^{-1}, the following commands are available:

sortA *list name*	Sorts list in ascending order.
sortD *list name*	Sorts list in descending order.
dim(*list name,size*)	Returns a list with size changed as specified.
fill(*value,size*)	Enter the specified value for all items.
cumul *list name*	Sequentially cumulates each item in the list.
df_list *list name*	Returns a new list using the difference between adjacent items in the list.
aug(*list name,list name*)	Returns a list appending the specified lists.
min *list name*	Returns the minimum value in the list.
max *list name*	Returns the maximum value in the list.
mean *list name*	Returns the mean value of items in the list.
med *list name*	Returns the median value of items in the list.
sum *list name*	Returns the sum of items in the list.
prod *list name*	Returns the multiplication of items in the list.
stdDv *list name*	Returns the standard deviation of the list.
vari *list name*	Returns the variance of the list.
o_prod(*list name,list name*)	Returns the outer product of 2 lists (vectors).
i_prod(*list name,list name*)	Returns the inner product of 2 lists (vectors).
abs *list name*	Returns the absolute value of the list (vector).
list→mat ([MATH] [5])	Creates matrices with left column data from each list. (L1→matA, L2→matB, L3→matC, L4→matD) Mode changes from list mode to matrix mode.
list→matA ([MATH] [6])	Creates a matrix with column data from each list. (L1, L2, L3, L4→matA) Mode changes from list mode to matrix mode.

ERROR AND CALCULATION RANGES

Errors

An error will occur if an operation exceeds the calculation ranges, or if a mathematically illegal operation is attempted. When an error occurs, pressing [◄] (or [►]) automatically moves the cursor back to the place in the equation where the error occurred. Edit the equation or press [ON/C] to clear the equation.

Error Codes and Error Types

Syntax error (Error 1):
- An attempt was made to perform an invalid operation.
  Ex. 2 [2ndF] [→r/θ]

Calculation error (Error 2):
- The absolute value of an intermediate or final calculation result equals or exceeds 10^{100}.
- An attempt was made to divide by 0 (or an intermediate calculation resulted in zero).
- The calculation ranges were exceeded while performing calculations.

Depth error (Error 3):
- The available number of buffers was exceeded. (There are 10 buffers* for numeric values and 24 buffers for calculation instructions in the normal mode).
  *5 buffers in other modes, and 1 buffer for Matrix/List data.
- Data items exceeded 100 in the statistics mode.

Equation too long (Error 4):
- The equation exceeded its maximum input buffer (142 characters). An equation must be shorter than 142 characters.

Equation recall error (Error 5):
- The stored equation contains a function not available in the mode used to recall the equation. For example, if a numerical value with numbers other than 0 and 1 is stored as a decimal, etc., it cannot be recalled when the calculator is set to binary.

Memory over error (Error 6):
- Equation exceeded the formula memory buffer (256 characters in total in F1 - F4).

Invalid error (Error 7):
- Matrix definition error or entering an invalid value.

Dimension error (Error 8):
- Matrix/list dimensions inconsistent while calculation.

Invalid DIM error (Error 9):
- Size of matrix/list exceeds calculation range.

No define error (Error 10):
- Undefined matrix/list used in calculation.

Calculation Ranges 【30】

- **Within the ranges specified, this calculator is accurate to ±1 of the least significant digit of the mantissa. However, a calculation error increases in continuous calculations due to accumulation of each calculation error. (This is the same for y^x, $\sqrt[x]{\ }$, e^x, *ln*, Matrix/List calculations, etc., where continuous calculations are performed internally.)**
  Additionally, a calculation error will accumulate and become larger in the vicinity of inflection points and singular points of functions.
- Calculation ranges
  $\pm 10^{-99} \sim \pm 9.999999999 \times 10^{99}$ and 0.

If the absolute value of an entry or a final or intermediate result of a calculation is less than 10^{-99}, the value is considered to be 0 in calculations and in the display.

BATTERY REPLACEMENT

Notes on Battery Replacement

Improper handling of batteries can cause electrolyte leakage or explosion. Be sure to observe the following handling rules:
- Replace both batteries at the same time.
- Do not mix new and old batteries.
- Make sure the new batteries are the correct type.
- When installing, orient each battery properly as indicated in the calculator.
- Batteries are factory-installed before shipment, and may be exhausted before they reach the service life stated in the specifications.

Notes on erasure of memory contents
When the battery is replaced, the memory contents are erased. Erasure can also occur if the calculator is defective or when it is repaired. Make a note of all important memory contents in case accidental erasure occurs.

When to Replace the Batteries

If the display has poor contrast or nothing appears on the display even when [ON/C] is pressed in dim lighting, it is time to replace the batteries.

Cautions

- Fluid from a leaking battery accidentally entering an eye could result in serious injury. Should this occur, wash with clean water and immediately consult a doctor.
- Should fluid from a leaking battery come in contact with your skin or clothes, immediately wash with clean water.
- If the product is not to be used for some time, to avoid damage to the unit from leaking batteries, remove them and store in a safe place.
- Do not leave exhausted batteries inside the product.
- Do not fit partially used batteries, and be sure not to mix batteries of different types.
- Keep batteries out of the reach of children.
- Exhausted batteries left in the calculator may leak and damage the calculator.
- Explosion risk may be caused by incorrect handling.
- Do not throw batteries into a fire as they may explode.

Replacement Procedure

1. Turn the power off by pressing [2ndF] [OFF].
2. Remove the two screws. (Fig. 1)
3. Slide the battery cover slightly and lift it to remove.
4. Remove the used batteries by prying them out with a ball-point pen or other similar pointed device. (Fig. 2)
5. Install two new batteries. Make sure the "+" side is facing up.
6. Replace the cover and screws.
7. Press the RESET switch (on the back).
- Make sure that the display appears as shown below. If the display does not appear as shown, remove the batteries, reinstall them and check the display once again.

(Fig. 1) (Fig. 2)

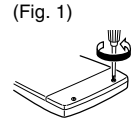

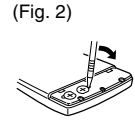



Automatic Power Off Function

This calculator will turn itself off to save battery power if no key is pressed for approximately 10 minutes.

SPECIFICATIONS

Calculations:	Scientific calculations, complex number calculations, equation solvers, statistical calculations, etc.
Internal calculations:	Mantissas of up to 14 digits
Pending operations:	24 calculations 10 numeric values in the normal mode (5 numeric values in other modes, and 1 numeric value for Matrix/List data.)
Power source:	Built-in solar cells 3 V ⎓ (DC): Backup batteries (Alkaline batteries (LR44) × 2)
Operating temperature:	0°C – 40°C (32°F – 104°F)
External dimensions:	79.6 mm (W) × 154.5 mm (D) × 13.2 mm (H) 3-1/8" (W) × 6-3/32" (D) × 17/32" (H)
Weight:	Approx. 97g (0.22 lb) (Including batteries)
Accessories:	Batteries × 2 (installed), operation manual, quick reference card and hard case

FOR MORE INFORMATION ABOUT SCIENTIFIC CALCULATOR

Visit our Web site.
http://sharp-world.com/calculator/

SHARP
SHARP CORPORATION

EL-506W
EL-546W

CALCULATION EXAMPLES
ANWENDUNGSBEISPIELE
EXEMPLES DE CALCUL
EJEMPLOS DE CÁLCULO
EXEMPLOS DE CÁLCULO
ESEMPI DI CALCOLO
REKENVOORBEELDEN
PÉLDASZÁMÍTÁSOK
PŘÍKLADY VÝPOČTŮ
RÄKNEEXEMPEL
LASKENTAESIMERKKEJÄ
ПРИМЕРЫ ВЫЧИСЛЕНИЙ
UDREGNINGSEKSEMPLER
ตัวอย่างการคำนวณ
نماذج للحسابات
计算例子
CONTOH-CONTOH PENGHITUNGAN
CONTOH-CONTOH PERHITUNGAN

【1】 ▲ ▼

①3(5+2)=	ON/C 3 (5 + 2) =	*21.*
②3×5+2=	3 × 5 + 2 =	*17.*
③3×5+3×2=	3 × 5 + 3 × 2 =	*21.*
→①	2ndF ▲	
→②	▼	
→③	▼	
→②	▲	

【2】 SET UP

100000÷3=		
[NORM1]	ON/C 100000 ÷ 3 =	*33'333.33333*
→[FIX]	SET UP 1 0	*33'333.33333*
[TAB 2]	SET UP 2 2	*33'333.33*
→[SCI]	SET UP 1 1	*3.33 ×10 04*
→[ENG]	SET UP 1 2	*33.33 ×10 03*
→[NORM1]	SET UP 1 3	*33'333.33333*
3÷1000=		
[NORM1]	ON/C 3 ÷ 1000 =	*0.003*
→[NORM2]	SET UP 1 4	*3. ×10 −03*
→[NORM1]	SET UP 1 3	*0.003*

【3】 + − × ÷ ( ) +/− Exp

45+285÷3=	ON/C 45 + 285 ÷ 3 =	*140.*
$\frac{18+6}{15-8}$ =	(18 + 6) ÷ (15 − 8 =	*3.428571429*
42×(−5)+120=	42 × +/− 5 + 120 =	*−90.*
	*1 (5 +/−) *1	
(5×10³)÷(4×10⁻³)=	5 Exp 3 ÷ 4 Exp +/− 3 =	*1'250'000.*

【4】

34+57=	34 + 57 =	*91.*
45+57=	45 =	*102.*
68×25=	68 × 25 =	*1'700.*
68×40=	40 =	*2'720.*

【5】 sin cos tan sin⁻¹ cos⁻¹ tan⁻¹ π hyp arc hyp ln log e^x 10^x x^{-1} x^2 x^3 $\sqrt{}$ y^x $\sqrt[x]{}$ $\sqrt[3]{}$ n! $_nP_r$ $_nC_r$ %

sin60[°]=	ON/C sin 60 =	*0.866025403*
$\cos\frac{\pi}{4}$ [rad]=	SET UP 0 1 cos (2ndF π ÷ 4) =	*0.707106781*
tan⁻¹1=[g]	SET UP 0 2 2ndF tan⁻¹ 1 =	*50.*
	SET UP 0 0	
(cosh 1.5 + sinh 1.5)² =	ON/C (hyp cos 1.5 + hyp sin 1.5) x^2 =	*20.08553692*
$\tanh^{-1}\frac{5}{7}$ =	2ndF arc hyp tan (5 ÷ 7) =	*0.895879734*

ln 20 =	ln 20 =	*2.995732274*
log 50 =	log 50 =	*1.698970004*
e^3 =	2ndF e^x 3 =	*20.08553692*
$10^{1.7}$ =	2ndF 10^x 1.7 =	*50.11872336*
$\frac{1}{6}+\frac{1}{7}$ =	6 2ndF x^{-1} + 7 2ndF x^{-1} =	*0.309523809*
$8^{-2}-3^4\times5^2$ =	8 y^x +/− 2 − 3 y^x 4 × 5 x^2 =	*−2'024.984375*
$(12^3)^{\frac{1}{4}}$ =	12 y^x 3 y^x 4 2ndF x^{-1} =	*6.447419591*
8^3	8 x^3 =	*512.*
$\sqrt{49}-\sqrt[4]{81}$ =	2ndF $\sqrt{}$ 49 − 4 2ndF $\sqrt[x]{}$ 81 =	*4.*
$\sqrt[3]{27}$	2ndF $\sqrt[3]{}$ 27 =	*3.*
4! =	4 2ndF n! =	*24.*
$_{10}P_3$ =	10 2ndF $_nP_r$ 3 =	*720.*
$_5C_2$ =	5 2ndF $_nC_r$ 2 =	*10.*
500×25%=	500 × 25 2ndF %	*125.*
120÷400=?%	120 ÷ 400 2ndF %	*30.*
500+(500×25%)=	500 + 25 2ndF %	*625.*
400−(400×30%)=	400 − 30 2ndF %	*280.*

- The range of the results of inverse trigonometric functions
- Der Ergebnisbereich für inverse trigonemetrische Funktionen
- Plage des résultats des fonctions trigonométriques inverses
- El rango de los resultados de funciones trigonométricas inversas
- Gama dos resultados das trigonométricas inversas
- La gamma dei risultati di funzioni trigonometriche inverse
- Het bereik van de resultaten van inverse trigonometrie
- Az inverz trigonometriai funkciók eredmény-tartománya
- Rozsah výsledků inverzních trigonometrických funkcí
- Omfång för resultaten av omvända trigonometriska funktioner
- Käänteisten trigonometristen funktioiden tulosten alue
- Диапазон результатов обратных тригонометрических функций
- Område for resultater af omvendte trigonometriske funktioner
- พิสัยของผลลัพท์ของฟังก์ชั่นตรีโกณมิตริกผกผัน
- نطاق نتائج الدول المثلثية المعكوسة
- 反三角函数计算结果的范围
- Julat hasil fungsi trigonometri songsang
- Kisaran hasil fungsi trigonometri inversi

	$\theta = \sin^{-1} x$, $\theta = \tan^{-1} x$	$\theta = \cos^{-1} x$
DEG	$-90 \le \theta \le 90$	$0 \le \theta \le 180$
RAD	$-\frac{\pi}{2} \le \theta \le \frac{\pi}{2}$	$0 \le \theta \le \pi$
GRAD	$-100 \le \theta \le 100$	$0 \le \theta \le 200$

【6】 d/dx ∫dx

d/dx $(x^4-0.5x^3+6x^2)$	ON/C ALPHA x y^x 4 − 0.5 ALPHA x x^3 + 6 ALPHA x x^2	
x=2		
dx=0.00002	2ndF d/dx 2 ENT ENT	*50.*
x=3	ENT 3 ENT 0.001 ENT	*130.5000029*
dx=0.001		
$\int_2^8 (x^2-5)dx$	ON/C ALPHA x x^2 − 5	
n=100	∫dx 2 ENT 8 ENT ENT	*138.*
n=10	ENT ENT ENT 10 ENT	*138.*

【7】 DRG▶

90°→ [rad]	ON/C 90 2ndF DRG▶	*1.570796327*
→ [g]	2ndF DRG▶	*100.*
→ [°]	2ndF DRG▶	*90.*
sin⁻¹0.8 = [°]	2ndF sin⁻¹ 0.8 =	*53.13010235*
→ [rad]	2ndF DRG▶	*0.927295218*
→ [g]	2ndF DRG▶	*59.03344706*
→ [°]	2ndF DRG▶	*53.13010235*

【8】 ALPHA RCL STO M+ M− ANS F1 F2 F3 F4

	ON/C 8 × 2 STO M	*16.*
24÷(8×2)=	24 ÷ ALPHA M =	*1.5*
(8×2)×5=	ALPHA M × 5 =	*80.*
	ON/C STO M	*0.*
\$150×3:M₁	150 × 3 M+	*450.*
+)\$250:M₂ =M₁+250	250 M+	*250.*
−)M₂×5%	RCL M × 5 2ndF %	*35.*
M	2ndF M− RCL M	*665.*

\$1=¥110	110 STO Y	*110.*
¥26,510=\$?	26510 ÷ RCL Y =	*241.*
\$2,750=¥?	2750 × RCL Y =	*302'500.*
r=3cm (r→Y)	3 STO Y	*3.*
πr²=?	2ndF π ALPHA Y x^2 =	*28.27433388*
$\frac{24}{4+6}$ = 2.4...(A)	24 ÷ (4 + 6) =	*2.4*
3×(A)+60÷(A)=	3 × ALPHA ANS + 60 ÷ ALPHA ANS =	*32.2*
πr²⇒F1	2ndF π ALPHA Y x^2 STO F1	*F1*
V = ?	3 STO Y RCL F1 × 4 ÷ 3 =	*3.* *37.69911184*

【9】

6+4=ANS	ON/C 6 + 4 =	*10.*
ANS+5	+ 5 =	*15.*
8×2=ANS	8 × 2 =	*16.*
ANS²	x^2 =	*256.*
44+37=ANS	44 + 37 =	*81.*
√ANS=	2ndF $\sqrt{}$ =	*9.*

【10】 $a\frac{b}{c}$ d/c

$3\frac{1}{2}+\frac{4}{3}=[a\frac{b}{c}]$	ON/C 3 $a\frac{b}{c}$ 1 $a\frac{b}{c}$ 2 + 4 $a\frac{b}{c}$ 3 =	*4 ┌ 5 ┌ 6 **
→[a.xxx]	$a\frac{b}{c}$	*4.833333333*
→[d/c]	2ndF d/c	*29 ┌ 6*
$10^{\frac{2}{3}}$ =	2ndF 10^x 2 $a\frac{b}{c}$ 3 =	*4.641588834*
$\left(\frac{7}{5}\right)^5$ =	7 $a\frac{b}{c}$ 5 y^x 5 =	*16807 ┌ 3125*
$\left(\frac{1}{8}\right)^{\frac{1}{3}}$ =	1 $a\frac{b}{c}$ 8 y^x 1 $a\frac{b}{c}$ 3 =	*1 ┌ 2*
$\sqrt{\frac{64}{225}}$ =	2ndF $\sqrt{}$ 64 $a\frac{b}{c}$ 225 =	*8 ┌ 15*
$\frac{2^3}{3^4}$ =	(2 y^x 3) $a\frac{b}{c}$ (3 y^x 4) =	*8 ┌ 81*
$\frac{1.2}{2.3}$ =	1.2 $a\frac{b}{c}$ 2.3 =	*12 ┌ 23*
$\frac{1°2'3''}{2}$ =	1 D°M'S 2 D°M'S 3 $a\frac{b}{c}$ 2 =	*0°31'1.5''*
$\frac{1\times10^3}{2\times10^3}$ =	1 Exp 3 $a\frac{b}{c}$ 2 Exp 3 =	*1 ┌ 2*
A = 7	ON/C 7 STO A	*7.*
$\frac{4}{A}$ =	4 $a\frac{b}{c}$ ALPHA A =	*4 ┌ 7*
$1.25+\frac{2}{5}$ = [a.xxx]	1.25 + 2 $a\frac{b}{c}$ 5 =	*1.65*
→$[a\frac{b}{c}]$	$a\frac{b}{c}$	*1 ┌ 13 ┌ 20*

* $4 \lrcorner 5 \lrcorner 6 = 4\frac{5}{6}$

【11】 ◀BIN ◀PEN ◀OCT ◀HEX ◀DEC NEG NOT AND OR XOR XNOR

DEC(25)→BIN	ON/C 2ndF ◀DEC 25 2ndF ◀BIN	*11001* b
HEX(1AC)	2ndF ◀HEX 1AC	
→BIN	2ndF ◀BIN	*110101100* b
→PEN	2ndF ◀PEN	*3203* P
→OCT	2ndF ◀OCT	*654* O
→DEC	2ndF ◀DEC	*428.*
BIN(1010−100)	2ndF ◀BIN (1010 − 100)	
×11 =	× 11 =	*10010* b
BIN(111)→NEG	NEG 111 =	*1111111001* b
HEX(1FF)+	2ndF ◀HEX 1FF 2ndF ◀OCT +	
OCT(512)=	512 =	*1511* O
HEX(?)	2ndF ◀HEX	*349* H
2FEC−	ON/C STO M 2ndF ◀HEX 2FEC −	
2C9E=(A)	2C9E M+	*34E* H
+)2000−	2000 −	
1901=(B)	1901 M+	*6FF* H
(C)	RCL M	*A4d* H
1011 AND	ON/C 2ndF ◀BIN 1011 AND	
101 = (BIN)	101 =	*1* b
5A OR C3 = (HEX)	2ndF ◀HEX 5A OR C3 =	*db* H
NOT 10110 = (BIN)	2ndF ◀BIN NOT 10110 =	*1111101001* b
24 XOR 4 = (OCT)	2ndF ◀OCT 24 XOR 4 =	*20* O
B3 XNOR	2ndF ◀HEX B3 XNOR	
2D = (HEX)	2D =	*FFFFFFFF61* H
→DEC	2ndF ◀DEC	*−159.*

【12】 D°M'S ↔DEG MATH (→sec, →min)

12°39'18.05" →[10]	ON/C 12 D°M'S 39 D°M'S 18.05 2ndF ↔DEG	***12.65501389***
123.678→[60]	123.678 2ndF ↔DEG	***123°40'40.8"***
3h30m45s + 6h45m36s = [60]	3 D°M'S 30 D°M'S 45 + 6 D°M'S 45 D°M'S 36 =	***10°16'21."***
1234°56'12" + 0°0'34.567" = [60]	1234 D°M'S 56 D°M'S 12 + 0 D°M'S 0 D°M'S 34.567 =	***1234°56'47."***
3h45m – 1.69h = [60]	3 D°M'S 45 − 1.69 = 2ndF ↔DEG	***2°3'36."***
sin62°12'24" = [10]	sin 62 D°M'S 12 D°M'S 24 =	***0.884635235***
24°→["]	24 D°M'S MATH 2	***86'400.***
1500"→[']	0 D°M'S 0 D°M'S 1500 MATH 3	***25.***

【13】 →rθ →xy , ←,→

$\begin{pmatrix} x=6 \\ y=4 \end{pmatrix} \rightarrow \begin{pmatrix} r= \\ \theta=[°] \end{pmatrix}$	ON/C 6 2ndF , 4	
	2ndF →rθ [r]	***7.211102551***
	2ndF ←,→ [θ]	***33.69006753***
	2ndF ←,→ [r]	***7.211102551***
$\begin{pmatrix} r=14 \\ \theta=36[°] \end{pmatrix} \rightarrow \begin{pmatrix} x= \\ y= \end{pmatrix}$	14 2ndF , 36	
	2ndF →xy [x]	***11.32623792***
	2ndF ←,→ [y]	***8.228993532***
	2ndF ←,→ [x]	***11.32623792***

【14】 CNST

V_0 = 15.3m/s	ON/C 15.3 × 10 + 2 2ndF x^{-1} ×	
t = 10s	CNST 03 × 10 x^2 =	***643.3325***
$V_0t+\frac{1}{2}gt^2$ = ?m		

【15】 CONV

125yd = ?m	ON/C 125 2ndF CONV 5 =	***114.3***

【16】 MATH (k, M, G, T, m, μ, n, p, f)

100m×10k=	100 MATH 1 4 × 10 MATH 1 0 =	***1'000.***

【17】 MDF SET UP

5÷9=ANS	ON/C SET UP 1 0 SET UP 2 1	
ANS×9=	5 ÷ 9 =	***0.6***
[FIX,TAB=1]	× 9 =*1	***5.0***
	5 ÷ 9 = 2ndF MDF	***0.6***
	× 9 =*2	***5.4***
	SET UP 1 3	

*1 5.5555555555555×10⁻¹×9

*2 0.6×9

【18】 MATH (SOLV)

sin x–0.5	ON/C sin ALPHA x − 0.5	
Start= 0	MATH 0 0 ENT ENT	***30.***
Start= 180	ENT 180 ENT ENT	***150.***

【19】 ALGB

	MODE 0	
$f(x)=x^3-3x^2+2$	ALPHA x y^x 3 − 3 ALPHA x x^2 + 2 2ndF ALGB	
$x=-1$	1 +/− ENT	***–2.***
$x=-0.5$	2ndF ALGB 0.5 +/− ENT	***1.125***
$\sqrt{A^2+B^2}$	2ndF √ (ALPHA A x^2 + ALPHA B x^2) 2ndF ALGB	
A = 2, B = 3	2 ENT 3 ENT	***3.605551275***
A = 2, B = 5	2ndF ALGB ENT 5 ENT	***5.385164807***

【20】 DATA (x,y) $\bar{x}$ Sx σx n Σx Σx² $\bar{y}$ Sy σy Σy Σy² Σxy r a b c x′ y′ ←,→ MATH (→t, P(, Q(, R()

DATA: 95, 80, 80, 75, 75, 75, 50

	MODE 1 0	***0.***
	95 DATA	***1.***
	80 DATA	***2.***
	DATA	***3.***
	75 (x,y) 3 DATA	***4.***
	50 DATA	***5.***
$\bar{x}$=	RCL $\bar{x}$	***75.71428571***
σx=	RCL σx	***12.37179148***
n=	RCL n	***7.***
Σx=	RCL Σx	***530.***
Σx^2=	RCL Σx²	***41'200.***
Sx=	RCL Sx	***13.3630621***
Sx^2=	x^2 =	***178.5714286***
$\frac{(95-\bar{x})}{Sx}\times 10+50$=	(95 − ALPHA $\bar{x}$) ÷ ALPHA Sx × 10 + 50 =	***64.43210706***
x = 60 → P(t) ?	MATH 1 60 MATH 0) =	***0.102012***
t = –0.5 → R(t) ?	MATH 3 0.5 +/−) =	***0.691463***

x	y		
		MODE 1 1	***0.***
2	5	2 (x,y) 5 DATA	***1.***
2	5	DATA	***2.***
12	24	12 (x,y) 24 DATA	***3.***
21	40	21 (x,y) 40 (x,y) 3 DATA	***4.***
21	40	15 (x,y) 25 DATA	***5.***
21	40	RCL a	***1.050261097***
15	25	RCL b	***1.826044386***
		RCL r	***0.995176343***
		RCL Sx	***8.541216597***
		RCL Sy	***15.67223812***
x=3 → y'=?		3 2ndF y'	***6.528394256***
y=46 → x'=?		46 2ndF x'	***24.61590706***

x	y		
		MODE 1 2	***0.***
12	41	12 (x,y) 41 DATA	***1.***
8	13	8 (x,y) 13 DATA	***2.***
5	2	5 (x,y) 2 DATA	***3.***
23	200	23 (x,y) 200 DATA	***4.***
15	71	15 (x,y) 71 DATA	***5.***
		RCL a	***5.357506761***
		RCL b	***–3.120289663***
		RCL c	***0.503334057***
x=10 → y'=?		10 2ndF y'	***24.4880159***
y=22 → x'=?		22 2ndF x'	***9.63201409***
		2ndF ←,→	***–3.432772026***
		2ndF ←,→	***9.63201409***

【21】 DATA ▲ ▼

DATA: 30, 40, 40, 50

	MODE 1 0	***0.***
	30 DATA	***1.***
	40 (x,y) 2 DATA	***2.***
	50 DATA	***3.***

↓

DATA: 30, **45**, **45**, **60**

	▼ ▼ ▼	
	45 (x,y) 3 DATA	*X2*= ***45.***
	▼	*N2*= ***3.***
	▼ 60 DATA	*X3*= ***60.***

【22】

$$\bar{x}=\frac{\Sigma x}{n} \qquad \sigma x=\sqrt{\frac{\Sigma x^2-n\bar{x}^2}{n}}$$

$$sx=\sqrt{\frac{\Sigma x^2-n\bar{x}^2}{n-1}}$$

$\Sigma x = x_1 + x_2 + \cdots + x_n$

$\Sigma x^2 = x_1^2 + x_2^2 + \cdots + x_n^2$

$$\bar{y}=\frac{\Sigma y}{n} \qquad \sigma y=\sqrt{\frac{\Sigma y^2-n\bar{y}^2}{n}}$$

$$sy=\sqrt{\frac{\Sigma y^2-n\bar{y}^2}{n-1}}$$

$\Sigma xy = x_1y_1 + x_2y_2 + \cdots + x_ny_n$

$\Sigma y = y_1 + y_2 + \cdots + y_n$

$\Sigma y^2 = y_1^2 + y_2^2 + \cdots + y_n^2$

【23】

$P(t) = \frac{1}{\sqrt{2\pi}} \int_{-\infty}^{t} e^{-\frac{x^2}{2}}\,dx$



$Q(t) = \frac{1}{\sqrt{2\pi}} \int_{0}^{t} e^{-\frac{x^2}{2}}\,dx$



$R(t) = \frac{1}{\sqrt{2\pi}} \int_{t}^{\infty} e^{-\frac{x^2}{2}}\,dx$

$t = \frac{x - \bar{x}}{\sigma x}$

Standardization conversion formula
Standard Umrechnungsformel
Formule de conversion de standardisation
Fórmula de conversión de estandarización
Fórmula de conversão padronizada
Formula di conversione della standardizzazione
Standaardisering omzettingsformule
Standard átváltási képlet
Vzorec pro přepočet rozdělení
Omvandlingsformel för standardisering
Normituksen konversiokaava
Формула стандартизованного преобразования
Omregningsformel for standardisering
สูตรแปลงคามาตรฐาน
صيغة التحويل لتوحيد المقاييس
标准化的转换公式
Rumus penukaran pemiawaian
Rumus konversi standarisasi

【24】 MODE (2-VLE)

$$\begin{bmatrix} a_1x + b_1y = c_1 \\ a_2x + b_2y = c_2 \end{bmatrix} \quad |D| = \begin{vmatrix} a_1 & b_1 \\ a_2 & b_2 \end{vmatrix}$$

MODE 2 0

$\begin{cases} 2x + 3y = 4 \\ 5x + 6y = 7 \end{cases}$: 2 ENT 3 ENT 4 ENT 5 ENT 6 ENT 7

x = ? : ENT [x] → ***–1.***

y = ? : ENT [y] → ***2.***

det(D) = ? : ENT [det(D)] → ***–3.***

【25】 MODE (3-VLE)

$$\begin{bmatrix} a_1x + b_1y + c_1z = d_1 \\ a_2x + b_2y + c_2z = d_2 \\ a_3x + b_3y + c_3z = d_3 \end{bmatrix} \quad |D| = \begin{vmatrix} a_1 & b_1 & c_1 \\ a_2 & b_2 & c_2 \\ a_3 & b_3 & c_3 \end{vmatrix}$$

MODE 2 1

$\begin{cases} x + y - z = 9 \\ 6x + 6y - z = 17 \\ 14x - 7y + 2z = 42 \end{cases}$: 1 ENT 1 ENT 1 +/− ENT 9 ENT 6 ENT 6 ENT 1 +/− ENT 17 ENT 14 ENT 7 +/− ENT 2 ENT 42

x = ? : ENT [x] → ***3.238095238***

y = ? : ENT [y] → ***–1.638095238***

z = ? : ENT [z] → ***–7.4***

det(D) = ? : ENT [det(D)] → ***105.***

【26】 MODE (QUAD, CUBIC)

MODE 2 2

$3x^2 + 4x - 95 = 0$: 3 ENT 4 ENT +/− 95

$x1$ = ? : ENT → ***5.***

$x2$ = ? : ENT → ***–6.333333333***

2ndF ENT → ***5.***

MODE 2 3

$5x^3 + 4x^2 + 3x + 7 = 0$: 5 ENT 4 ENT 3 ENT 7

$x1$ = ? : ENT → ***–1.233600307***

$x2$ = ? : ENT → ***0.216800153***

2ndF ←·→ → ***+ 1.043018296 i***

$x3$ = ? : ENT → ***0.216800153***

2ndF ←·→ → ***– 1.043018296 i***

【27】 MODE (CPLX)

MODE 3

$(12-6i) + (7+15i) - (11+4i)$ = : 12 − 6 i + 7 + 15 i − (11 + 4 i) = [x] → ***8.***

2ndF ←·→ [y] → ***+ 5. i***

2ndF ←·→ [x] → ***8.***

$6\times(7-9i) \times (-5+8i)$ = : 6 × (7 − 9 i) × (5 +/− + 8 i) = [x] → ***222.***

2ndF ←·→ [y] → ***+ 606. i***

$16\times(\sin 30° + i\cos 30°) \div (\sin 60° + i\cos 60°)$ = : 16 × (sin 30 + i cos 30) ÷ (sin 60 + i cos 60) = [x] → ***13.85640646***

2ndF ←·→ [y] → ***+ 8. i***



2ndF →rθ 8 ∠ 70 + 12 ∠ 25 = [r] → ***18.5408873***

2ndF ←·→ [θ] → ***∠ 42.76427608***

$r1 = 8, \theta1 = 70°$
$r2 = 12, \theta2 = 25°$
↓
r = ?, θ = ?°

$(1 + i)$ ↓ r = ?, θ = ?° : 2ndF →xy 1 + i = → ***1.***

2ndF →rθ [r] → ***1.414213562***

2ndF ←·→ [θ] → ***∠ 45.***

$(2 - 3i)^2$ = : 2ndF →xy (2 − 3 i) x^2 = [x] → ***–5.***

2ndF ←·→ [y] → ***– 12. i***

$\frac{1}{1+i}$ = : (1 + i) 2ndF x^{-1} = [x] → ***0.5***

2ndF ←·→ [y] → ***– 0.5 i***

CONJ(5+2i) : MATH 0 (5 + 2 i) = [x] → ***5.***

2ndF ←·→ [y] → ***– 2. i***

【28】 MODE (MAT)

$\begin{bmatrix} 1 & 2 \\ 3 & 4 \end{bmatrix} \rightarrow$ matA : MODE 4 ▼ 2 DATA 2 DATA 1 DATA 2 DATA 3 DATA 4 DATA

$\begin{bmatrix} 3 & 1 \\ 2 & 6 \end{bmatrix} \rightarrow$ matB : ON/C MATH 2 0 ▼ 2 DATA 2 DATA 3 DATA 1 DATA 2 DATA 6 DATA ON/C MATH 2 1

matA × matB = $\begin{bmatrix} 7 & 13 \\ 17 & 27 \end{bmatrix}$: ON/C MATH 0 0 × MATH 0 1 =

matA^{-1} = $\begin{bmatrix} -2 & 1 \\ 1.5 & -0.5 \end{bmatrix}$: ON/C MATH 0 0 2ndF x^{-1} =

dim(matA,3,3) = $\begin{bmatrix} 1 & 2 & 0 \\ 3 & 4 & 0 \\ 0 & 0 & 0 \end{bmatrix}$: ON/C MATH 3 0 MATH 0 0 2ndF , 3 2ndF , 3) =

fill(5,3,3) = $\begin{bmatrix} 5 & 5 & 5 \\ 5 & 5 & 5 \\ 5 & 5 & 5 \end{bmatrix}$: ON/C MATH 3 1 5 2ndF , 3 2ndF , 3) =

cumul matA = $\begin{bmatrix} 1 & 2 \\ 4 & 6 \end{bmatrix}$: ON/C MATH 3 2 MATH 0 0 =

aug(matA,matB) = $\begin{bmatrix} 1 & 2 & 3 & 1 \\ 3 & 4 & 2 & 6 \end{bmatrix}$: ON/C MATH 3 3 MATH 0 0 2ndF , MATH 0 1) =

identity 3 = $\begin{bmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix}$: ON/C MATH 3 4 3 =

rnd_mat(2,3) : ON/C MATH 3 5 2 2ndF , 3) =

det matA = –2 : ON/C MATH 4 0 MATH 0 0 =

trans matB = $\begin{bmatrix} 3 & 2 \\ 1 & 6 \end{bmatrix}$: ON/C MATH 4 1 MATH 0 1 =

mat → list : L1: {1 3} L2: {3 2} : ON/C MATH 5

【29】 MODE (LIST)

2, 7, 4 → L1
–3, –1, –4 → L2 : MODE 5 ▼ 3 DATA 2 DATA 7 DATA 4 DATA ON/C MATH 2 0 ▼ 3 DATA +/− 3 DATA +/− 1 DATA +/− 4 DATA ON/C MATH 2 1

L1+L2 = {–1 6 0} : ON/C MATH 0 0 + MATH 0 1 =

sortA L1 = {2 4 7} : ON/C MATH 3 0 MATH 0 0 =

sortD L1 = {7 4 2} : ON/C MATH 3 1 MATH 0 0 =

dim(L1,5) = {2 7 4 0 0} : ON/C MATH 3 2 MATH 0 0 2ndF , 5) =

fill(5,5) = {5 5 5 5 5} : ON/C MATH 3 3 5 2ndF , 5) =

cumul L1 = {2 9 13} : ON/C MATH 3 4 MATH 0 0 =

df_list L1 = {5 –3} : ON/C MATH 3 5 MATH 0 0 =

aug(L1,L2) = {2 7 4 –3 –1 –4} : ON/C MATH 3 6 MATH 0 0 2ndF , MATH 0 1) =

min L1 = 2 : ON/C MATH 4 0 MATH 0 0 =

max L1 = 7 : ON/C MATH 4 1 MATH 0 0 =

mean L1 = 4.333333333 : ON/C MATH 4 2 MATH 0 0 =

med L1 = 4 : ON/C MATH 4 3 MATH 0 0 =

sum L1 = 13 : ON/C MATH 4 4 MATH 0 0 =

prod L1 = 56 : ON/C MATH 4 5 MATH 0 0 =

stdDv L1 = 2.516611478 : ON/C MATH 4 6 MATH 0 0 =

vari L1 = 6.333333333 : ON/C MATH 4 7 MATH 0 0 =

o_prod(L1,L2) = {–24 –4 19} : ON/C MATH 4 8 MATH 0 0 2ndF , MATH 0 1) =

i_prod(L1,L2) = –29 : ON/C MATH 4 9 MATH 0 0 2ndF , MATH 0 1) =

abs L2 = 5.099019514 : ON/C MATH 4 A MATH 0 1 =

list → matA matA: $\begin{bmatrix} 2 & -3 \\ 7 & -1 \\ 4 & -4 \end{bmatrix}$: ON/C MATH 6

【30】

Function	Dynamic range
Funktion	zulässiger Bereich
Fonction	Plage dynamique
Función	Rango dinámico
Função	Gama dinâmica
Funzioni	Campi dinamici
Functie	Rekencapaciteit
Függvény	Megengedett számítási tartomány
Funkce	Dynamický rozsah
Funktion	Definitionsområde
Funktio	Dynaaminen ala
Функция	Динамический диапазон
Funktion	Dynamikområde
ฟังก์ชัน	พิสัยในการคำนวณ
الدالة	النطاق الديناميكي
函数	取值范围
Fungsi	Julat dinamik
Fungsi	Kisaran dinamis
sin x, cos x, tan x	DEG: $\lvert x \rvert < 10^{10}$ (tan x : $\lvert x \rvert \neq 90$ (2n–1))* RAD: $\lvert x \rvert < \frac{\pi}{180} \times 10^{10}$ (tan x : $\lvert x \rvert \neq \frac{\pi}{2}$ (2n–1))* GRAD: $\lvert x \rvert < \frac{10}{9} \times 10^{10}$ (tan x : $\lvert x \rvert \neq 100$ (2n–1))*
$\sin^{-1}x$, $\cos^{-1}x$	$\lvert x \rvert \leq 1$
$\tan^{-1}x$, $\sqrt[3]{x}$	$\lvert x \rvert < 10^{100}$
ln x, log x	$10^{-99} \leq x < 10^{100}$
y^x	• $y > 0$: $-10^{100} < x \log y < 100$ • $y = 0$: $0 < x < 10^{100}$ • $y < 0$: x = n ($0 < \lvert x \rvert < 1$: $\frac{1}{x}$ = 2n–1, $x \neq 0$)*, $-10^{100} < x \log \lvert y \rvert < 100$
$\sqrt[x]{y}$	• $y > 0$: $-10^{100} < \frac{1}{x} \log y < 100$ ($x \neq 0$) • $y = 0$: $0 < x < 10^{100}$ • $y < 0$: x = 2n–1 ($0 < \lvert x \rvert < 1$: $\frac{1}{x}$ = n, $x \neq 0$)*, $-10^{100} < \frac{1}{x} \log \lvert y \rvert < 100$
e^x	$-10^{100} < x \leq 230.2585092$
10^x	$-10^{100} < x < 100$
sinh x, cosh x, tanh x	$\lvert x \rvert \leq 230.2585092$
$\sinh^{-1} x$	$\lvert x \rvert < 10^{50}$
$\cosh^{-1} x$	$1 \leq x < 10^{50}$
$\tanh^{-1} x$	$\lvert x \rvert < 1$
x^2	$\lvert x \rvert < 10^{50}$
x^3	$\lvert x \rvert < 2.15443469 \times 10^{33}$
$\sqrt{x}$	$0 \leq x < 10^{100}$
x^{-1}	$\lvert x \rvert < 10^{100}$ ($x \neq 0$)
n!	$0 \leq n \leq 69$*
nPr	$0 \leq r \leq n \leq 9999999999$* $\frac{n!}{(n-r)!} < 10^{100}$
nCr	$0 \leq r \leq n \leq 9999999999$* $0 \leq r \leq 69$ $\frac{n!}{(n-r)!} < 10^{100}$
↔DEG, D°M'S	0°0'0.00001" ≤ $\lvert x \rvert$ < 10000°
$x, y \rightarrow r, \theta$	$\sqrt{x^2 + y^2} < 10^{100}$
$r, \theta \rightarrow x, y$	$0 \leq r < 10^{100}$ DEG: $\lvert \theta \rvert < 10^{10}$ RAD: $\lvert \theta \rvert < \frac{\pi}{180} \times 10^{10}$ GRAD : $\lvert \theta \rvert < \frac{10}{9} \times 10^{10}$
DRG ▶	DEG→RAD, GRAD→DEG: $\lvert x \rvert < 10^{100}$ RAD→GRAD: $\lvert x \rvert < \frac{\pi}{2} \times 10^{98}$
(A+Bi)+(C+Di)	$\lvert A + C \rvert < 10^{100}$, $\lvert B + D \rvert < 10^{100}$
(A+Bi)–(C+Di)	$\lvert A - C \rvert < 10^{100}$, $\lvert B - D \rvert < 10^{100}$
(A+Bi)×(C+Di)	$(AC - BD) < 10^{100}$ $(AD + BC) < 10^{100}$

(A+Bi)÷(C+Di)	$\frac{AC + BD}{C^2 + D^2} < 10^{100}$ $\frac{BC - AD}{C^2 + D^2} < 10^{100}$ $C^2 + D^2 \neq 0$
→DEC →BIN →PEN →OCT →HEX AND OR XOR XNOR	DEC : $\lvert x \rvert \leq 9999999999$ BIN : $1000000000 \leq x \leq 1111111111$ $0 \leq x \leq 111111111$ PEN : $2222222223 \leq x \leq 4444444444$ $0 \leq x \leq 2222222222$ OCT : $4000000000 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$ HEX : FDABF41C01 $\leq x \leq$ FFFFFFFFFF $0 \leq x \leq$ 2540BE3FF
NOT	BIN : $1000000000 \leq x \leq 1111111111$ $0 \leq x \leq 111111111$ PEN : $2222222223 \leq x \leq 4444444444$ $0 \leq x \leq 2222222221$ OCT : $4000000000 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$ HEX : FDABF41C01 $\leq x \leq$ FFFFFFFFFF $0 \leq x \leq$ 2540BE3FE
NEG	BIN : $1000000001 \leq x \leq 1111111111$ $0 \leq x \leq 111111111$ PEN : $2222222223 \leq x \leq 4444444444$ $0 \leq x \leq 2222222222$ OCT : $4000000001 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$ HEX : FDABF41C01 $\leq x \leq$ FFFFFFFFFF $0 \leq x \leq$ 2540BE3FF

* n, r: integer / ganze Zahlen / entier / entero / inteiro / intero / geheel getal / egész számok / celé číslo / heltal / kokonaisluku / целые / heltal / จำนวนเต็ม / عدد صحيح / 整数 / integer / bilangan bulat

In Europe:

This equipment complies with the requirements of Directive 89/336/EEC as amended by 93/68/EEC.

Dieses Gerät entspricht den Anforderungen der EG-Richtlinie 89/336/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans la directive 89/336/CEE modifiée par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijn 89/336/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti della direttiva 89/336/EEC come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ενωσης 89/336/ΕΟΚ, όπως ο κανονισμός αυτός συμπληρώθηκε από την οδηγία 93/68/ΕΟΚ.

Este equipamento obedece às exigências da directiva 89/336/CEE na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de la Directiva 89/336/CEE modificada por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjen 89/336/EEC så som kompletteras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivet 89/336/EEC i endringen 93/68/EEC.

Tämä laite täyttää direktiivin 89/336/EEC vaatimukset, jota on muutettu direktiivillä 93/68/EEC.

Данное устройство соответствует требованиям директивы 89/336/ЕЕС с учетом поправок 93/68/ЕЕС.

Ez a készülék megfelel a 89/336/EGK sz. EK-irányelvben és annak 93/68/EGK sz. módosításában foglalt követelményeknek.

Tento přístroj vyhovuje požadavkům směrnice 89/336/EEC v platném znění 93/68/EEC.

Nur für Deutschland/For Germany only:

Umweltschutz
Das Gerät wird durch eine Batterie mit Strom versorgt.
Um die Batterie sicher und umweltschonend zu entsorgen, beachten Sie bitte folgende Punkte:
- Bringen Sie die leere Batterie zu Ihrer örtlichen Mülldeponie, zum Händler oder zum Kundenservice-Zentrum zur Wiederverwertung.
- Werfen Sie die leere Batterie niemals ins Feuer, ins Wasser oder in den Hausmüll.

Seulement pour la France/For France only:

Protection de l'environnement
L'appareil est alimenté par pile. Afin de protéger l'environnement, nous vous recommandons:
- d'apporter la pile usagée ou à votre revendeur ou au service après-vente, pour recyclage.
- de ne pas jeter la pile usagée dans une source de chaleur, dans l'eau ou dans un vide-ordures.

Endast svensk version/For Sweden only:

Miljöskydd
Denna produkt drivs av batteri.
Vid batteribyte skall följande iakttagas:
- Det förbrukade batteriet skall inlämnas till er lokala handlare eller till kommunal miljöstation för återinssamling.
- Kasta ej batteriet i vattnet eller i hushållssoporna. Batteriet får ej heller utsättas för öppen eld.

OPMERKING: ALLEEN VOOR NEDERLAND/
NOTE: FOR NETHERLANDS ONLY

(NL) Batterij niet weggooien, maar inleveren als KCA.

- Physical Constants and Metric Conversions are shown in the tables.
- Physikalischen Konstanten und metriche Umrechnungen sind in der Tabelle aufgelistet.
- Les constants physiques et les conversion des unités sont indiquées sur les tableaux.
- Las constants fisicas y conversiones métricas son mostradas en las tables.
- Constantes Fisicas e Conversões Métricas estão mostradas nas tablelas.
- La constanti fisiche e le conversioni delle unità di misura vengono mostrate nella tabella.
- De natuurconstanten en metrische omrekeningen staan in de tabellen hiernaast.
- A fizikai konstansok és a metrikus átváltások a táblázatokban találhatók.
- Fyzikální konstanty a převody do metrické soustavy jsou uvedeny v tabulce.
- Fysikaliska konstanter och metriska omvandlingar visas i tabellerna.
- Fysikaaliset vakiot ja metrimuunnokset näkyvät taulukoista.
- В таблицах показаны физические константы и метрические преобразования.
- Fysiske konstanter og metriske omskrivninger vises i tabellen.
- ค่าคงที่ทางฟิสิกส์และการแปลงหน่วยเมตริกแสดงไว้ในตาราง
- الثوابت الفيزيائية والجداول المترية مبيّنة في الجداول.
- 关于物理常数和公制转换的问题请参见表中所示内容。
- Pemalar Fizik dan Pertukaran Metrik ditunjukkan di dalam jadual.
- Konstanta Fisika dan Konversi Metrik diperlihatkan di dalam tabel.

PHYSICAL CONSTANTS

(CNST) 01 — 52

No.	SYMBOL	UNIT	No.	SYMBOL	UNIT	No.	SYMBOL	UNIT
01	c, c_0	m s^{-1}	19	μ_B	J T^{-1}	37	eV	J
02	G	m^3 kg^{-1} s^{-2}	20	μ_e	J T^{-1}	38	t	K
03	g_n	m s^{-2}	21	μ_N	J T^{-1}	39	AU	m
04	m_e	kg	22	μ_p	J T^{-1}	40	pc	m
05	m_p	kg	23	μ_n	J T^{-1}	41	$M(^{12}C)$	kg mol^{-1}
06	m_n	kg	24	μ_μ	J T^{-1}	42	$\hbar$	J s
07	m_μ	kg	25	λ_c	m	43	E_h	J
08	lu	kg	26	$\lambda_{c,\,p}$	m	44	G_0	s
09	e	C	27	σ	W m^{-2} K^{-4}	45	α^{-1}	
10	h	J s	28	N_A, L	mol^{-1}	46	m_P/m_e	
11	k	J K^{-1}	29	V_m	m^3 mol^{-1}	47	M_u	kg mol^{-1}
12	μ_0	N A^{-2}	30	R	J mol^{-1} K^{-1}	48	$\lambda_{c,\,n}$	m
13	ε_0	F m^{-1}	31	F	C mol^{-1}	49	c_1	W m^2
14	r_e	m	32	R_K	Ohm	50	c_2	m K
15	α		33	$-e/m_e$	C kg^{-1}	51	Z_0	Ω
16	a_0	m	34	$h/2m_e$	m^2 s^{-1}	52	-	Pa
17	R_∞	m^{-1}	35	γ_p	s^{-1} T^{-1}			
18	Φ_0	Wb	36	K_J	Hz V^{-1}			

METRIC CONVERSIONS

x (2ndF) (CONV) 1 — 44

No.	UNIT	No.	UNIT	No.	UNIT
1	in→cm	16	kg→lb	31	J→cal$_{IT}$
2	cm→in	17	°F→°C	32	cal$_{IT}$→J
3	ft→m	18	°C→°F	33	hp→W
4	m→ft	19	gal (US)→ℓ	34	W→hp
5	yd→m	20	ℓ→gal (US)	35	ps→W
6	m→yd	21	gal (UK)→ℓ	36	W→ps
7	mile→km	22	ℓ→gal (UK)	37	kgf/cm^2→Pa
8	km→mile	23	fl oz (US)→mℓ	38	Pa→kgf/cm^2
9	n mile→m	24	mℓ→fl oz (US)	39	atm→Pa
10	m→n mile	25	fl oz (UK)→mℓ	40	Pa→atm
11	acre→m^2	26	mℓ→fl oz (UK)	41	mmHg→Pa
12	m^2→acre	27	J→cal	42	Pa→mmHg
13	oz→g	28	cal→J	43	kgf·m→J
14	g→oz	29	J→cal$_{15}$	44	J→kgf·m
15	lb→kg	30	cal$_{15}$→J		